Reference Guide
for the
Kyocera 2100 Series Phones

KYOCERA WIRELESS CORP.
10300 CAMPUS POINT DRIVE
SAN DIEGO, CALIFORNIA 92121 U.S.A.
Visit us at **www.kyocera-wireless.com**
To purchase accessories, visit **www.kyocera-wireless.com/store**

80-B6761-1, Rev. -

This manual is based on the production versions of the Kyocera2100 Series phones. Software changes may have occurred after this printing. Kyocera reserves the right to make changes in technical and product specifications without prior notice. The products and equipment described in this documentation are manufactured under license from QUALCOMM Incorporated under one or more of the following U.S. patents:

4,901,307	5,056,109	5,099,204	5,101,501	5,103,459	5,107,225	5,109,390	5,193,094	5,228,054
5,257,283	5,265,119	5,267,261	5,267,262	5,280,472	5,283,536	5,289,527	5,307,405	5,309,474
5,337,338	5,339,046	5,341,456	5,383,219	5,392,287	5,396,516	D356,560	5,408,697	5,414,728
5,414,796	5,416,797	5,426,392	5,437,055	D361,065	5,442,322	5,442,627	5,452,473	5,461,639
5,469,115	5,469,471	5,471,497	5,475,870	5,479,475	5,483,696	5,485,486	5,487,175	5,490,165
5,497,395	5,499,280	5,504,773	5,506,865	5,509,015	5,509,035	5,511,067	5,511,073	5,513,176
5,515,177	5,517,323	5,519,761	5,528,593	5,530,928	5,533,011	5,535,239	5,539,531	5,544,196
5,544,223	5,546,459	5,548,812	5,559,881	5,559,865	5,561,618	5,564,083	5,566,000	5,566,206
5,566,357	5,568,483	5,574,773	5,574,987	D375,740	5,576,662	5,577,022	5,577,265	D375,937
5,588,043	D376,804	5,589,756	5,590,069	5,590,406	5,590,408	5,592,548	5,594,718	5,596,570
5,600,754	5,602,834	5,602,833	5,603,096	5,604,459	5,604,730	5,608,722	5,614,806	5,617,060
5,621,752	5,621,784	5,621,853	5,625,876	5,627,857	5,629,955	5,629,975	5,638,412	5,640,414
5,642,398	5,644,591	5,644,596	5,646,991	5,652,814	5,654,979	5,655,220	5,657,420	5,659,569
5,663,807	5,666,122	5,673,259	5,675,581	5,675,644	5,680,395	5,687,229	D386,186	5,689,557
5,691,974	5,692,006	5,696,468	5,697,055	5,703,902	5,704,001	5,708,448	5,710,521	5,710,758
5,710,768	5,710,784	5,715,236	5,715,526	5,722,044	5,722,053	5,722,061	5,722,063	5,724,385
5,727,123	5,729,540	5,732,134	5,732,341	5,734,716	5,737,687	5,737,708	5,742,734	D393,856
5,748,104	5,751,725	5,751,761	5,751,901	5,754,533	5,754,542	5,754,733	5,757,767	5,757,858
5,758,266	5,761,204	5,764,687	5,774,496	5,777,990	5,778,024	5,778,338	5,781,543	5,781,856
5,781,867	5,784,406	5,784,532	5,790,589	5,790,632	5,793,338	D397,110	5,799,005	5,799,254
5,802,105	5,805,648	5,805,843	5,812,036	5,812,094	5,812,097	5,812,538	5,812,607	5,812,651
5,812,938	5,818,871	5,822,318	5,825,253	5,828,348	5,828,661	5,835,065	5,835,847	5,839,052
5,841,806	5,842,124	5,844,784	5,844,885	5,844,899	5,844,985	5,848,063	5,848,099	5,850,612
5,852,421	5,854,565	5,854,786	5,857,147	5,859,612	5,859,838	5,859,840	5,861,844	5,862,471
5,862,474	5,864,760	5,864,763	5,867,527	5,867,763	5,870,427	5,870,431	5,870,674	5,872,481
5,872,774	5,872,775	5,872,823	5,877,942	5,878,036	5,870,631	5,881,053	5,881,368	5,884,157
5,884,193	5,884,196	5,892,178	5,892,758	5,892,774	5,892,816	5,892,916	5,893,035	D407,701
5,898,920	5,903,554	5,903,862	D409,561	5,907,167	5,909,434	5,910,752	5,911,128	5,912,882
D410,893	5,914,950	5,915,235	5,917,708	5,917,811	5,917,812	5,917,837	5,920,284	5,920,834
D411,823	5,923,650	5,923,705	5,926,143	5,926,470	5,926,500	5,926,786	5,926,786	5,930,230
5,930,692	Other patents pending.							

T9 Text Input is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554, Canadian Pat. 1,331,057 and patents pending worldwide.

Kyocera is a registered trademark of Kyocera Corporation. QCP is a trademark of Kyocera Wireless Corp. Brick Attack is a trademark of Kyocera Wireless Corp. Phone.com and UP.Link are trademarks of Openwave Systems Incorporated. QUALCOMM is a registered trademark of QUALCOMM Incorporated. T9 is a registered trademark of Tegic Communications, Inc. Other product and brand names may be trademarks or registered trademarks of their respective owners.

Copyright © 2001 Kyocera Wireless Corp. All rights reserved.

ACN 093 453 037

80-B6761-1, Rev. -

FCC/IC Notice for Kyocera 2119 Phones

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To comply with FCC radiation exposure requirements, use of this device for body-worn operational configurations is limited to accessories tested and approved by Kyocera Wireless Corp. Other accessories used with this device for body-worn operations must not contain any metallic components and must provide at least 26.7mm separation distance including the antenna and the user's body.

This model phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.* Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.39 W/kg and when worn on the body, as described in this user guide, is 0.649 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/fccid after searching on FCC ID OVFKWC-2119.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at **http://www.wow-com.com.**

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

FCC/IC Notice for Kyocera 2135 Phones

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To comply with FCC radiation exposure requirements, use of this device for body-worn operational configurations is limited to accessories tested and approved by Kyocera Wireless Corp. Other accessories used with this device for body-worn operations must not contain any metallic components and must provide at least 26.7mm separation distance including the antenna and the user's body.

This model phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.* Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.33 W/kg and when worn on the body, as described in this user guide, is 0.77 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/fccid after searching on FCC ID OVFKWC-2135.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at **http://www.wow-com.com.**

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Caution

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the warranty and user's authority to operate the equipment.

Warning

Use only Kyocera approved accessories with Kyocera phones. Use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

Optimize your phone's performance

Use the guidelines on pages and 10 to learn how to optimize the performance and life of your phone, antenna, and battery.

Air bags

If you have an air bag, DO NOT place installed or portable phone equipment or other objects over the air bag or in the air bag deployment area. If equipment is not properly installed, you and your passengers risk serious injury.

Potentially unsafe areas

Posted facilities–Turn your phone off in any facility when posted notices require you to do so.

Aircraft–FCC regulations prohibit using your phone on a plane that is in the air. Turn your phone off before boarding aircraft.

Vehicles–RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer of the device to determine if it is adequately shielded from external RF energy. Your physician may be able to help you obtain this information.

Blasting areas–Turn off your phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres–Turn off your phone when you are in any area with a potentially explosive atmosphere. Obey all signs and instructions. Sparks in such areas could cause an explosion or fire, resulting in bodily injury or death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include:

- fueling areas such as gas stations
- below deck on boats
- transfer or storage facilities for fuel or chemicals
- vehicles using liquefied petroleum gas, such as propane or butane
- areas where the air contains chemicals or particles such as grain, dust, or metal powders
- any other area where you would normally be advised to turn off your vehicle engine

Use with care

Use only in normal position (to ear). Don't bend the antenna or touch it unnecessarily. Pull out the antenna when on a call and push it in when the phone is not in use. Avoid dropping, hitting, bending, or sitting on the phone.

Keep phone dry

If the phone gets wet, turn the power off immediately and return it to the dealer for service.

Resetting the phone

If the screen seems frozen and the keypad does not respond to keypresses, reset the phone by completing the following steps (see page 1 for detailed instructions):

- Remove the battery door.
- Remove and replace the battery.

If the problem persists, call your service provider for assistance.

Qualified service

Your service provider can help you if you are experiencing problems with your phone.

If you have additional questions, contact your service provider for technical support. If the problem persists, return the phone with all accessories and packaging to the dealer for qualified service.

Accessories

Use only Kyocera-approved accessories with Kyocera phones. Use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone.

To shop online for a Hands-free Car Kit and other phone accessories, visit **www.kyocera-wireless.com/store.** To order by phone, call (800) 211-1537 (U.S.A. only) or (510) 683-4004.

Radio frequency (RF) energy

Your telephone is a radio transmitter and receiver. When it is on, it receives and sends out RF energy. Your service provider's network controls the power of the RF signal. This power level can range from 0.006 to 0.6 watts.

In August 1996, the U.S. Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. These guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies in the following reports:

- ANSI C95.1 (American National Standards Institute, 1992)
- NCRP Report 86 (National Council on Radiation Protection and Measurements, 1986)
- ICNIRP (International Commission on Non-Ionizing Radiation Protection, 1996)

Your phone complies with the standards set by these reports and the FCC guidelines.

Kyocera Wireless Corp.
10300 Campus Point Drive, San Diego, CA 92121
U.S.A.
Visit us at **www.kyocera-wireless.com**
To purchase accessories, visit
www.kyocera-wireless.com/store

Contents

Chapter 1—Getting Started 1
What to Do First 2
To Install the Battery 2
To Charge the Battery 3
Parts of Your Phone 4
Screen Icons 5
Menus 6
Your phone's menus 6
Using your phone's menus 7
Basic Functions 8
To turn on the phone 8
To turn off the phone 8
To find your phone number 8
To make a call 8
To end a call 8
To answer a call 8
To silence the ringer or alert 8
To mute or unmute a call 9
To adjust the earpiece volume 9
To access voicemail 9
To lock the keypad 10
To unlock the keypad 10
Where to Get More Information 11

Chapter 2—Battery 12
To Install the Battery 13
To Charge the Battery 14
Making Calls while Charging 14
Charging Accessories 14
To Remove the Battery 15
Power Save Mode 16
Battery Guidelines 16
Tips for Improving Battery Performance 17

Chapter 3—Calling 18
Speed Dialing 19
To assign a speed dialing location 19
To speed dial a number 20
To remove a speed dialing location 20
1-Touch Dialing 20
To enable 1-Touch Dialing 20
To use 1-Touch Dialing 21
Redialing the Last Number Called 21
Reviewing Recent Calls 21
Types of calls 21

To view the Recent Calls list . . . 22
To dial from the Recent Calls list . . . 22
Call types . . . 22

Chapter 4—Contacts . . . 23
Entering Text . . . 24
To change text entry modes . . . 24
To change capitalization modes . . . 25
To use normal text entry mode . . . 25
To use Text Input rapid text entry mode . . . 25
To enter symbols . . . 27
To enter numbers . . . 27
To change language and enter special characters . . . 28
Working with Contact Cards . . . 29
To save a phone number from the home screen . . . 29
To save a phone number through the Contacts directory . . . 30
To open a saved contact card . . . 32
To edit a contact card . . . 32
To erase information from a contact card . . . 34
To call from the Contacts directory . . . 35

Chapter 5—Settings . . . 36
Silence All . . . 38
To silence the ringer or alert . . . 38
To change the vibration, backlight, or silent ringer setting . . . 38
Keyguard . . . 39
To turn keyguard on . . . 39
To turn keyguard off . . . 39
Sounds . . . 40
Display . . . 42
Security . . . 44
To lock and unlock the phone . . . 44
To limit calls out . . . 44
To change your lock code . . . 44
To erase all contacts . . . 44
To erase recent calls . . . 45
To reset the phone . . . 45
Call Information . . . 46
Recent Calls Timer . . . 46
All Calls Timer . . . 46
Browser Timer . . . 46
Network . . . 47
To select digital or analog mode . . . 47
Roam Option . . . 47
Roam/Service Alert . . . 47
Privacy Alert . . . 47
Data/Fax Calls In . . . 48
Extras . . . 49
1-Touch Dialing . . . 49
Browser Prompt . . . 49
Messaging . . . 50

To change your voicemail number . . . 50
To erase messages automatically . . . 50
Alerts . . . 51
Accessories . . . 52
Power Backlighting . . . 52
Headset Ringing . . . 52
Auto-Answer . . . 52

Chapter 6—Messages . . . 53
Entering Text . . . 54
To change text entry modes . . . 54
To change capitalization modes . . . 55
To use normal text entry mode . . . 55
To use Text Input rapid text entry mode . . . 55
To enter symbols . . . 57
To enter numbers . . . 57
To change language and enter special characters . . . 58
About Text Messages . . . 58
Retrieving Messages . . . 59
To check voicemail from the New Messages alert screen . . . 59
To check voicemail from the home screen . . . 59
To check text messages from the New Messages alert screen . . . 60
To check text messages from the home screen . . . 60
Sending Text Messages . . . 61
To send a new message . . . 61
To send a preset message (AutoMsg) . . . 62
To send a saved message . . . 63
Message Delivery Options . . . 64
To add a callback number to a message . . . 64
To send a message at a scheduled time . . . 64
Erasing Messages . . . 65
To erase messages automatically . . . 65
To erase messages one at a time . . . 65
Additional information about message status . . . 65
Changing Your Voicemail Speed Dialing Location . . . 67
Alerts . . . 68
Troubleshooting Messages . . . 69
Memory . . . 69
If you cannot send messages . . . 69

Chapter 7—Tools . . . 70
Alarm Clock . . . 71
Tip Calculator . . . 72
Calculator . . . 73
Countdown Timer . . . 74
Stopwatch . . . 75
Brick Attack™ . . . 76

Chapter 8—Web Browser . . . 77
Using the Web Browser . . . 78

To start the Web Browser 78
To navigate in the Web Browser 78
Web Browser options 78
To exit the Web Browser 79
Other Web Services 80

Chapter 9—Frequently Asked Questions 81

Chapter 1

Getting Started

Congratulations on your purchase of a Kyocera 2100 Series phone. This phone contains many features, including Web and email access, a Contacts directory which stores names, addresses, notes and up to 200 phone numbers, multiple language options, vibrate alert, and a full array of productivity tools, such as a calculator, alarm clock and timer.

This document describes two 2100 Series phones:

- the Kyocera 2135 trimode phone, with CDMA digital service at 800 MHz and 1900 MHz, and analog service at 800 MHz
- the Kyocera 2119 single-mode phone, with CDMA digital service at 1900 MHz

This chapter introduces your Kyocera 2100 Series phone and provides an overview of its features.

In this chapter

- What to Do First page 2
- To Install the Battery page 2
- To Charge the Battery page 3
- Parts of Your Phone page 4
- Screen Icons page 5
- Menus page 6
- Basic Functions page 8
- Where to Get More Information page 11

What to Do First

The battery in your Kyocera 2100 Series phone is delivered partially charged. Before first use, you must install the battery and fully charge it. You need the following:

- Kyocera 2135 or Kyocera 2119 phone
- Kyocera 2100 Series phone battery
- AC Adapter

These items are included in your phone package.

To Install the Battery

1. Hold the phone face down.

   Place the battery with the metal contacts facing down and towards the bottom of the phone.

   Align the battery door to the grooves on the side of the phone.

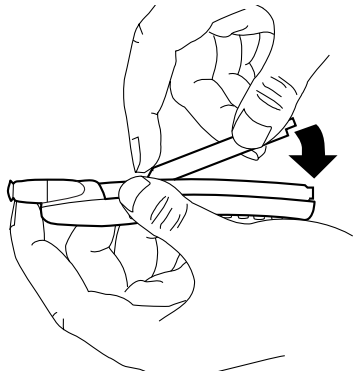

2. Slide the battery door on while pressing down firmly, ensuring that the battery door clicks into place. Check and repeat if the battery door is not aligned. Do not force.

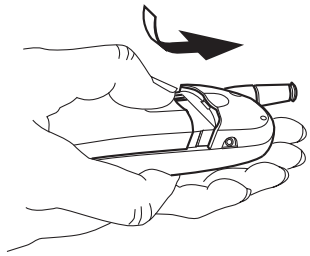

3. Connect the AC Adapter to the proper jack on the bottom of the phone, then connect the adapter's plug to a wall outlet. Fully charge the battery before using the phone.

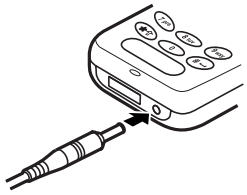

Note Before using your phone, fully charge the battery. To learn how to charge the battery, see page 3.

To Charge the Battery

To charge your phone's battery, complete the following steps.

1. Turn the phone off.
2. Connect the AC Adapter to the proper jack on the bottom of the phone as shown.

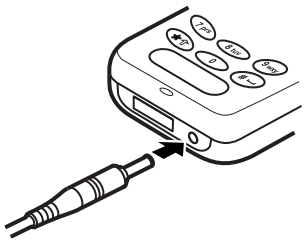

3. Connect the adapter's plug to a wall outlet.

   The battery icon is animated as the battery is charging. The battery is fully charged when "Charging is complete" appears on the screen. You can safely recharge the battery at any time, even if it has a partial charge.

Note You must have at least a partial charge in the battery to make or receive calls, regardless of whether or not the AC Adapter is connected to the phone.

Parts of Your Phone

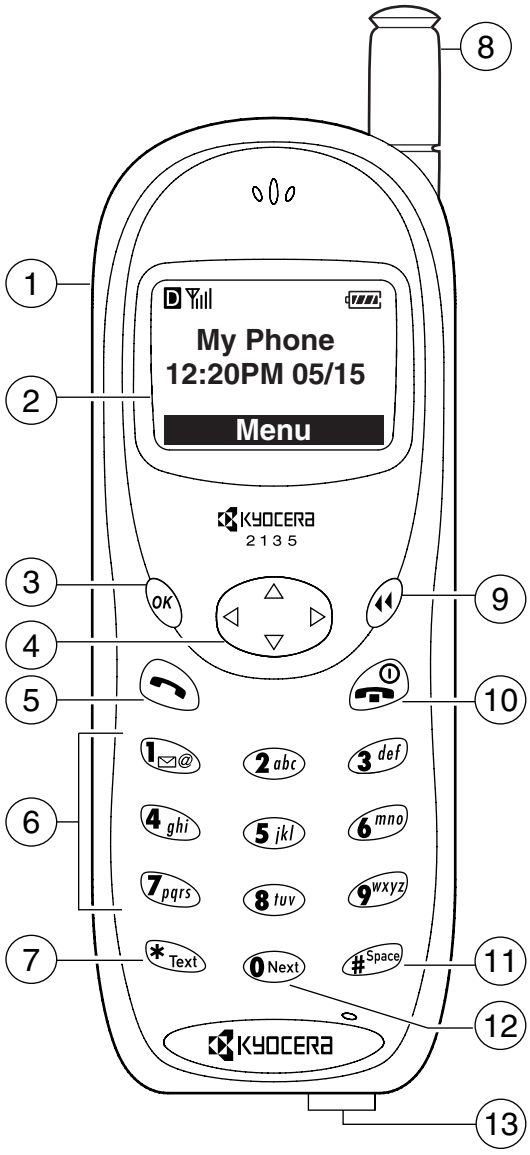

1. Jack for Hands-free headset (sold separately).

   Warning: This jack is for the headset only. Inserting an accessory into the incorrect jack will damage the phone.
2. Home screen. Press OK to select **Menu**.
3. **OK key** selects a menu item or option.
4. **Navigator key** adjusts volume when in a call; scrolls up, down, left, or right through lists and menus; and positions the cursor during text entry.
5. **Send/Talk key** starts or answers a call.
6. Use the **keypad** to enter numbers, letters, or symbols.
7. **Text key** changes case in text entry and cycles through text entry modes.
8. Extend the **antenna** to make or answer a call. Push in the **antenna** when the phone is not in use.
9. **Clear key** erases the last character in text entry, or returns to the previous menu.
10. **End/Power key** turns on and turns off the phone, ends a call, or returns to the home screen.
11. **Space key** enters a space during text entry.
12. **0 key** cycles through word choices during text entry using T9® Text Input (available in English only).
13. Jacks for AC Adapter (included) and data cable (sold separately).

Warning: Inserting an accessory into the incorrect jack will damage the phone.

Screen Icons

The following icons may appear on your phone screen.

The phone is operating in CDMA digital mode. If you do not see this icon on your screen, your phone is operating in analog mode (Analog mode is not available on the Kyocera 2119 phone.)

The phone is receiving a signal. You can make and receive calls.

The phone is not receiving a signal. You cannot make or receive calls.

A call is in progress.

The alarm clock is set.

The phone ringer is silenced. The phone vibrates or lights up instead of ringing.

The phone is roaming outside of its home area.

You have a text message, voice mail, or page.

You have an urgent text message, voice mail, or page.

Enhanced CDMA voice privacy is on, if available from your service provider. This icon also indicates when you are in a secure web browser session.

The battery is fully charged.

Press ⟨nav⟩ up.

Press ⟨nav⟩ down.

Press ⟨clear⟩ to clear an item.

Press ⟨OK⟩ to select an item.

Enter text using T9® Text Input rapid text entry (available in English only for 2100 Series phones).

abc Enter text using normal alphabetical text entry.

Capitalize the next letter when entering text.

Capitalize every letter when entering text.

Capitalize the first letter of each word when entering text in the Contacts directory. Capitalize the first letter of each sentence when entering text in a text message.

&?! Enter symbols.

123 Enter numbers.

Menus

Your phone's menus

The top-level menus of the Kyocera 2100 Series phones are listed below.

Contacts

View All

Add New

Find Name

Speed Dial List

Business List

Personal List

Information

Messages

Voicemail

Send New

Text InBox

Net Alerts

Text OutBox

Filed

Erase Msgs

Msg Settings

Web Browser

Recent Calls

Settings

Silence All

Keyguard

Sounds

Display

Security

Call Information (not available on all phones)

Network

Extras

Messaging

Accessories

Tools

Alarm Clock

Tip Calculator

Calculator

Countdown

Stopwatch

Brick Attack™

Phone Info

Phone Number

Roaming/Service Status (appears only if you are roaming)

Using your phone's menus

1. From the home screen, press OK to select **Menu**.
2. Your menus will appear differently depending on how your Main Menu View has been set:

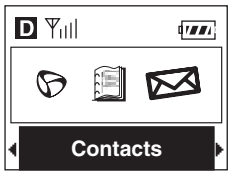

In **Small Icons view,** menus appear as small icons.

- If your screen looks like this, press ⟷ left or right to scroll to other menus.

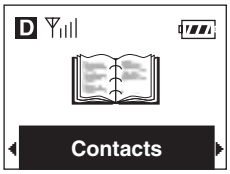

In **Large Icons view,** menus appear as large icons.

- If your screen looks like this, press ⟷ left or right to scroll to other menus.

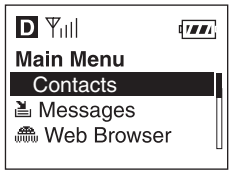

In **List Menus view,** menus appear in a list.

- If your screen looks like this, press ⟷ up or down to scroll through the list to other menus.

3. Press OK to select the highlighted menu option.

   In all three screens shown above, **Contacts** is highlighted. Pressing OK would open the Contacts menu.

4. Once you have opened a top-level menu, you will find additional menus and options. Navigate through the menus and options as follows.
   - If options appear in a vertical list, press ⟷ up or down to scroll through them.
   - If options appear in a bar at the bottom of the screen, press ⟷ right or left to scroll through them.
   - Press ◄◄ to return (back up) through the menus.
   - Press ⏻ to return to the home screen.

Note

To change your Main Menu View setting, see page see "Display" on page 42.

Basic Functions

To turn on the phone

- Press . and the home screen appear when the phone is turned on and is ready to make or receive a call. On the Kyocera 2135 phone, D appears if the phone is operating in CDMA digital mode. On the Kyocera 2119 phone, D always appears when service is available. Additional icons may appear on either phone, depending on your service area.

To turn off the phone

- Hold down until "Powering off" appears (about three seconds).

To find your phone number

From the home screen, select **Menu** → **Phone Info**. Your phone number appears.

Note

In this guide, → tells you to select an option from a menu. For example, **Menu** → **Settings** means select **Menu**, then **Settings**.

To make a call

1. Extend the antenna.
2. Enter the phone number.
3. Press .

To end a call

- Press .

To answer a call

- Press .

To silence the ringer or alert

- To silence the ringer or stop the vibration alert temporarily during an incoming call, press . To answer the call, press immediately.

Tip

To put your phone in silent mode so that it will not ring for any incoming call or alert, see "Silence All" on page 38.

To mute or unmute a call

You can turn mute on during a call so that you can hear everything your caller is saying, but they cannot hear you.

- To turn **Mute** on during a call, press ⊕ right, then press OK to select **Mute** from the bottom of the screen.

Tip

If you do not see **Mute** at the bottom of the screen, press ↩ to go back to the home screen. You can select **Mute** from the bottom of the home screen.

- To turn **Mute** off during a call, press OK to select **UnMute** from the bottom of the screen.

To adjust the earpiece volume

- **Manual:** To manually adjust the earpiece volume during a call, press ⊕ up or down.
- **Smart Sound:** To automatically adjust the earpiece volume based on the amount of noise around you or the other person's voice volume level, follow these steps:
  1. Place a call from a quiet environment.
  2. During the call, press ⊕ up or down to set the volume to a comfortable level.
  3. Select **Menu** → **Settings** → **Sounds** → **Smart Sound**.
  4. Select an option:
     - **Enabled**—Adjust the volume automatically. The volume you have just set is used as a baseline. You can manually adjust the volume during a call by pressing ⊕ up or down.
     - **Disabled**—Keep the volume level the same unless you manually adjust it by pressing ⊕ up or down.
  5. Press OK to save the setting.

To access voicemail

For details on how to set up voicemail and access voice mail messages, contact your service provider. Once your voice mail is set up, you can dial into your voice mail system as follows.

To access voicemail from the New Messages screen

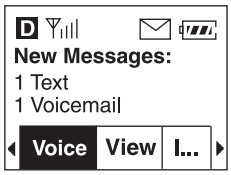

1. Press OK to select **Voice.**
2. Follow your service provider's voice menus to listen to the messages.

If you are accessing your voicemail for the first time, follow the voice prompts to set up your voicemail. Check with your service provider if you need further assistance.

3. To return to the list of messages, select **Done.**

To access voicemail from the home screen

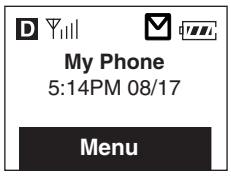

1. You can access your voicemail in several ways from the home screen.
   - If your service provider has preset the 1 key as your voicemail speed dial number, do one of the following:
     - Press and hold 1 .
     - Press 1 → .
   - Otherwise, use the menus as follows:
     a. Press OK to select **Menu.**
     b. Use and OK to select **Messages** → **Voicemail.**
        The number of messages appears to the left of the word "Voicemail."
     c. Press to select **Call.**
2. Follow your service provider's voice menus to listen to the messages.

   If you are accessing your voicemail for the first time, follow the voice prompts to set up your voicemail. Check with your service provider if you need further assistance.

To lock the keypad

- To protect your phone from accidental keypresses when a call is not in progress, press left and hold until the message appears: "Keypad guard is active. Press 123 to unlock."
- For more keypad guard options, see "To turn keyguard on" on page 39.

To unlock the keypad

- Press 1 → 2abc → 3def in this order.

Where to Get More Information

To help you learn about the many features of your Kyocera 2100 Series phone as quickly as possible, your product package includes the following documents.

User's Guide for the Kyocera 2135 Phone or **User's Guide for the Kyocera 2100 Series Phone—**These guides introduce each Kyocera 2100 Series phone. They identify the icons, buttons, and controls, and explain briefly how to use the Kyocera 2100 Series phones and their major features.

Web site—Visit **http://www.kyocera-wireless.com** for an interactive demonstration and training tutorial. You can also view accessories available for the Kyocera 2100 Series phone.

Product Support—You can contact the Kyocera Wireless Corp. Customer Care Center in any of the following ways:

- Web site: **www.kyocera-wireless.com**
- Email: phone-help@kyocera-wireless.com
- Phone: (800) 349-4478 (U.S.A. and Canada only) or (858) 882-1401.

Chapter 2

Battery

This chapter covers the basic functions of your phone's battery.

In this chapter

- To Install the Battery page 13
- To Charge the Battery page 14
- To Remove the Battery page 15
- Power Save Mode page 16
- Battery Guidelines page 16
- Tips for Improving Battery Performance page 17

Your phone comes with an internal/removable lithium ion (LiIon) battery. The battery is partially charged when you receive the phone. **Before using your phone, install and fully charge the battery.**

To Install the Battery

To install a new battery, do the following.

1. Hold the phone face down.

   Place the battery with the metal contacts facing down and toward the bottom of the phone.

   Align the battery door to the grooves on the side of the phone.

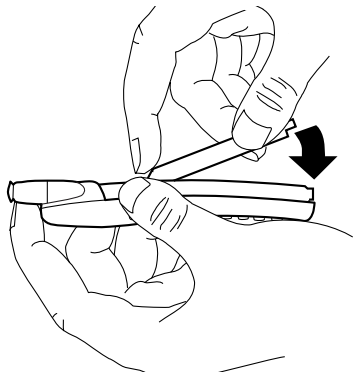

2. Slide the battery door on while pressing down firmly, ensuring that the battery door clicks into place. Check and repeat if the battery door is not aligned. Do not force.

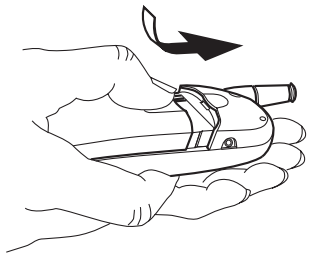

3. Connect the AC Adapter to the proper jack on the bottom of the phone, then connect the adapter's plug to a wall outlet. Fully charge the battery before using the phone.

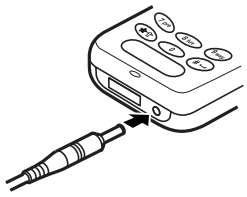

To Charge the Battery

Before using your phone, fully charge the battery as follows.

1. Press ⏻ to turn off the phone.
2. Connect the AC Adapter to the proper jack on the bottom of the phone as shown at right.
3. Connect the adapter's plug to a wall outlet.

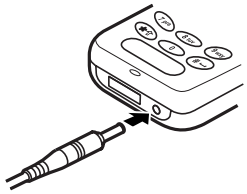

The battery icon on the phone screen is animated as the battery is charging. The battery is fully charged when the battery icon looks like 🔋. You can safely recharge the battery at any time, even if it has a partial charge.

Tip To speed up charging, turn off the phone before charging the battery with the AC Adapter.

Making Calls while Charging

You must have at least a partial charge in the battery to make or receive calls, regardless of whether or not the AC Adapter is connected to the phone.

Charging Accessories

Several charging accessories may be used with your phone. To view the selection and purchase accessories, visit The Accessory Store online at **www.kyocera-wireless.com.**

To Remove the Battery

1. Turn off the phone by holding down ⏻ until "Powering off" appears.
2. Hold the phone face down. Using your thumb, slide the battery door down until it stops.

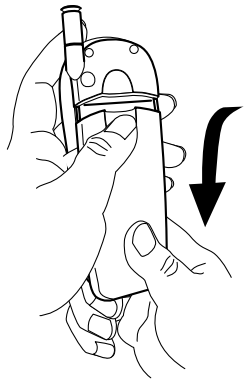

3. Lift the battery door off the phone.

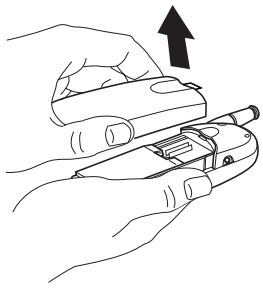

4. Lift the battery up and out of the phone.

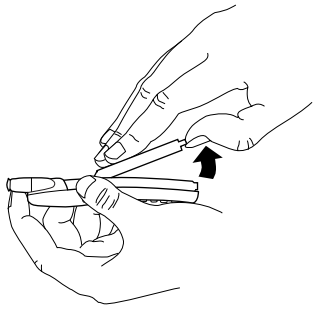

Power Save Mode

Your phone switches to Power Save Mode after several unsuccessful attempts to locate a signal. When the phone is in Power Save Mode, you cannot make or receive calls, and the following screen appears.

Press any key to exit.

Battery Guidelines

- Do not disassemble, puncture, or short-circuit the battery.
- If you have not used the battery for more than a month, recharge it before using your phone.
- Avoid extreme temperatures, direct sunlight, and high humidity.
- Never dispose of any battery in or near a fire. The battery could explode.

Important

If the battery is expired or not installed in the phone, you may not be able to make an analog call. If you experience this condition, charge the battery to make an analog call.

Tips for Improving Battery Performance

Before using your phone, fully charge the battery.

The following functions may drain the battery more quickly:

- Backlighting is frequently on. (To adjust backlighting, select **Menu** → **Settings** → **Display** → **Backlighting**, then select an option such as **10 seconds**.)
- (Kyocera 2135 phone only) The phone is frequently used in analog mode. If D is not visible on your home screen, you are in analog mode. (To set your phone to operate in different modes, see "To select digital or analog mode" on page 47).
- You are far away from a base station or cell site when in digital mode.
- Data cables or accessories are connected to the phone.
- Service is not available or is available intermittently. The phone requires more power to acquire service than to maintain service.
- The earpiece and ringer volume settings are high. To adjust the earpiece volume, see To adjust the earpiece volume on page 9. To adjust the ringer volume, select **Menu** → **Settings** → **Sounds** → **Ringer Volume**, and press ⊛ left to lower the volume.
- The phone receives frequent voicemail notifications, pages, and text message, and they are not acknowledged quickly. To use power most efficiently, acknowledge notifications and messages immediately.

Chapter 3

Calling

This chapter explains how to use the calling features of your Kyocera 2100 Series phone.

In this chapter

- Speed Dialing page 19
- 1-Touch Dialing page 20
- Redialing the Last Number Called page 21
- Reviewing Recent Calls page 21

Speed Dialing

Speed dialing allows you to quickly dial stored phone numbers.

Before you can speed dial a number, you must enter the number in your Contacts directory and assign it a speed dialing location (such as 2, 3, or 4).

Note Speed dialing location 1 is reserved for your voicemail access number.

To assign a speed dialing location

A speed dialing location is the number or numbers that you enter to speed dial a phone number.

Before you begin, the phone number you want to speed dial must be saved as a contact card in the Contacts directory. To save a contact card, see "To save a phone number from the home screen" on page 29.

1. Open a saved contact card as follows:
   a. From the home screen, press down to list contacts.
   b. Use and OK to select the contact you want.
2. Press down to highlight the contact's phone number and press OK to select it.

   A list of options appears.
3. Use and OK to select **Speed Dialing**.

   Available speed dialing locations (such as 2, 3, 4) are listed on the screen. The speed dialing location is the number you will enter to speed dial the contact.
4. Make sure **Assign** is highlighted, then select the speed dialing location you want for this contact.

   A message appears: "[Contact] Saved as speed dial [location]."

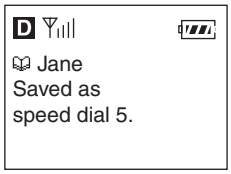

Entering Pauses in Speed Dial Numbers

You can include a pause in a phone number. A **timed pause** causes the phone to stop dialing for two seconds. A **hard pause** causes the phone to stop dialing until you select **Release**.

When you save the phone number of an automated service such as voicemail, you can include a pause where you would be required to stop dialing for a few seconds before you select an option or enter a password. For example, you can program your phone

to enter a phone number, then a pause, then a voicemail extension or calling card number for you.

To enter a speed dial number that includes a pause, take these steps.

1. Enter the first portion of the phone number.
2. Press ⟨⟩ right through the list of options at the bottom of the screen.
   Two of the options are **Time Pause** and **Hard Pause.**
3. Press OK to select a type of pause.
   A ⏱ appears in the phone number for a **timed pause**.
   A + appears in the phone number for a **hard pause**.
4. Enter the remaining numbers.

To speed dial a number

From the home screen, enter the one- or two-digit speed dialing location and press ☎.

Note Speed dialing location 1 is reserved for your voicemail access number.

To remove a speed dialing location

1. From the home screen, select **Menu** → **Contacts** → **Speed Dial List**.
2. Press OK to select the speed dialing location you want to remove.
3. Press OK to select the phone number to remove.
4. Select **Speed Dialing**.
5. Select a speed dialing location and press ⟨⟩ right to select **Remove**.
6. Press OK .

Tip To learn how to change the phone number assigned to 1✉@, see "Changing Your Voicemail Speed Dialing Location" on page 67.

1-Touch Dialing

1-Touch Dialing is a speed dialing shortcut which allows you to call a speed dialing number quickly without pressing ☎.

To enable 1-Touch Dialing

1. Select **Menu** → **Settings** → **Extras** → **1-Touch Dialing** → **Enabled**.
2. Press OK.

To use 1-Touch Dialing

From the home screen, enter one- or two-digit speed dialing number and hold down the last number. For example, if the speed dialing number is 15, press 1 , then press and hold 5 jkl .

Redialing the Last Number Called

- To redial the last number called, press twice from the home screen.

Reviewing Recent Calls

The Recent Calls list shows the last 15 incoming and outgoing calls. Recent calls are shown with the type of call and the phone number or contact name.

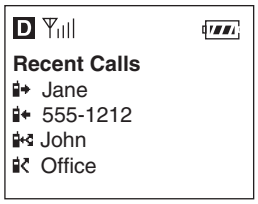

Types of calls

Call types are indicated by the following icons. Some call types may not be available on all phones. Check with your service provider.

Call to

Call from

Three-way call

Call waiting

Missed call

To view the Recent Calls list

1. From the home screen, select **Menu** → **Recent Calls**.
2. Press ⊕ down to scroll through the list of calls, and press OK to select a call entry.
3. Press ⊕ right or left to scroll through the options at the bottom of the screen:
   - **Save New**—Saves the phone number as a new contact. See "To save a phone number from the home screen" on page 29.
   - **Add to**—Allows you to add the phone number to an existing contact card. See "To edit a contact card" on page 32.
   - **Time**—Displays the time, date, and duration of the call.
   - **Number**—Displays the phone number called.
4. Press OK to select an option.

To dial from the Recent Calls list

1. From the home screen, select **Menu** → **Recent Calls**.
2. Do one of the following:
   - Select the call entry in the list and press ⏻.
   - Select the call entry in the list and press OK to display the call detail. Then press ⏻ to call the number.

Call types

Call waiting

When you are on a voice call and another call comes in, you will hear a short beep for the first call. No sound is heard for additional calls.

- Press ⏻ to put your first caller on hold and answer the call.
- If you ignore the alert, the call will go to voicemail.

Three-way calling

If this feature is available from your service provider, you may conduct three-way calls. Check with your service provider for availability.

1. Press ⏻ to put your first caller on hold.
2. Dial the second number.
3. Press ⏻ again to conduct the three-way call.

Chapter 4

Contacts

Use your phone's Contacts directory like a set of phone index cards to store information about a person or company. The Contacts directory stores virtual contact cards, each of which can include one name, up to six phone numbers, two email addresses, two street addresses, two URLs, and a note. You can also set up a speed dialing location for each number. You can classify each phone number as work, home, mobile, pager, or fax. Phone numbers and cards can be set up as secret, so you can only access them with a security code.

Before using the Contacts directory, see "Entering Text" on page 24.

If you have the Kyocera Phone Desktop contacts manager software and data cable, you can download phone book entries from your computer to the Contacts directory on your phone.

In this chapter

- Entering Text page 24
- Working with Contact Cards page 29

Entering Text

You can enter letters, numbers, and symbols in a contact card. The default text entry mode is abc .

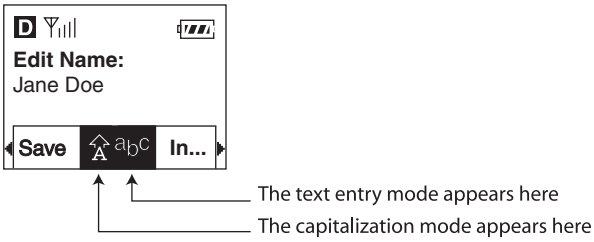

- To enter spaces, press #Space.
- To move the cursor, press ◄► right or left.
- To erase individual characters, press ◄◄.
- To erase all characters, press and hold ◄◄.

Tip

To change text entry modes quickly, press *Text once.
To change capitalization modes, press and hold *Text.

To change text entry modes

Text entry modes are as follows:

abc **Normal Alpha.** Enter one character at a time. See "To use normal text entry mode" on page 25.

T9 **Rapid Entry.** Find words by entering a few characters. See "To use Text Input rapid text entry mode" on page 25.

&?! **Symbols.** Enter punctuation characters. See "To enter symbols" on page 27.

123 **Numbers Only.** Enter numbers. See "To enter numbers" on page 27.

To change the text entry modes, take these steps:

1. From the text entry screen, press OK to highlight the options at the bottom of the screen.

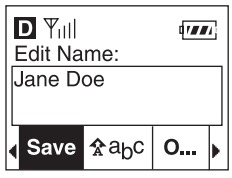

2. Press ⊕ right to highlight the current text entry mode, and press OK to select it.

   The current text entry mode will be abc, T9, &?!, or 123.

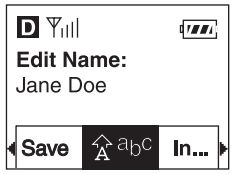

3. A list of text entry modes appears. Press ⊕ to scroll through the list.
4. Press OK to select a text entry mode.

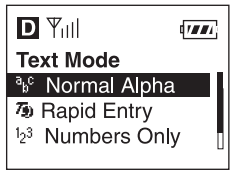

To change capitalization modes

- Press and hold *Text to change capitalization modes. Capitalization modes are as follows:

⇧	The next letter you enter is capitalized.
⇪	Every letter you enter is capitalized.
A	The first letter of each word is capitalized.
blank	Every letter you enter is in lower case.

To use abc normal text entry mode

abc normal text entry allows you to enter text using one keypress per letter.

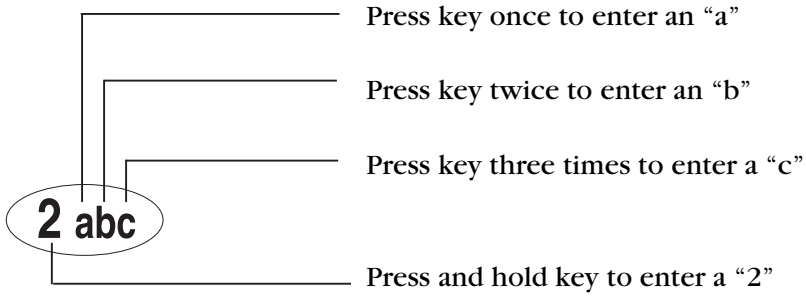
2 abc
Press key once to enter an “a”
Press key twice to enter an “b”
Press key three times to enter a “c”
Press and hold key to enter a “2”

Two seconds after you choose a character or number, the cursor moves one space to the right.

To use T9 Text Input rapid text entry mode

T9 Text Input rapid text entry mode (available in English only for 2100 Series phones) allows you to enter text quickly by anticipating the word you are entering. T9 accesses a dictionary of words in an attempt to match certain key combinations with words.

To enter words

1. Press each letter key once.
   For example, to enter the word “how,” press keys 4ghi → 6mno → 9wxyz .

Note

Wait until you have entered the entire word before checking the screen to see if the word shown is correct. Each time you press a key, the software will "guess" different words. You must enter all characters before it can find your word.

Several options may be listed, but only one appears on your screen at a time.

2. If the word that appears on the screen is not the word you want, press (0 Next) to cycle through the available words, then press (# Space) or press right to select the word you want.

Note

If the word you want is not listed, switch to abc mode and enter it. Once you enter the word, it will be saved in the T9 dictionary and it should appear for you the next time you use T9 mode.

To enter punctuation

1. To insert punctuation characters, press (1 @).
2. If the character shown is not the character you want, press (0 Next) to cycle through available characters.
3. Press (0 Next) or press right to select the character you want.

Rapid text entry example

The following steps describe how to enter the name "Jane":

Tip

Wait until you have typed the entire word before checking the screen to see if the word shown is correct. In the example below, the word "Jane" will not appear immediately; look at the keypad, not the phone screen, as you enter letters.

1. When you are in the text entry screen, press (* Text) until T9 appears to switch to rapid text entry mode. (See "To change text entry modes" on page 24).
2. Make sure A appears next to T9 at the bottom of the screen. If it does not appear, press and hold (* Text) until it appears.
3. Press (5 jkl) once. The letter "K" appears.
4. Press (2 abc) once. The first letter changes to an "L" and the letter "a" appears next to it.
5. Press (6 mno) once. The first letter changes to a "J", the second letter remains an "a," and the letter "n" appears next to it.
6. Press (3 def). The letter "d" appears.

For more information

For more instructions on how to use T9® Text Input rapid text entry, visit **www.tegic.com**.

To enter symbols

1. From the text entry screen, press ⊕ down to highlight the options at the bottom of the screen.
2. Press ⊕ right to the text entry mode you are currently using.
3. Press OK to select the mode.
4. Press ⊕ down through the list of modes.
5. Highlight &?! **Symbols**, then press OK to select it.
6. Press ⊕ down through the list. Each character is matched to a number key. Press the number key corresponding to the symbol you want to use. For example, to enter a comma, press 8 tuv .
7. To exit the list without entering a symbol, press ◄◄ .

After entering a symbol, the phone automatically returns to the text entry mode you were previously using.

Tip To cycle through a short list of symbols in abc or T9 mode, press 1 @

To enter numbers

The number setting allows you to enter numbers using the number keys.

- When you're using number mode, press a key once to enter the number on the key.

Tip To enter numbers in abc or T9 mode, press and hold a key until the number appears on the screen.

To change language and enter special characters

Your phone may support the English and Spanish languages. To enter Spanish characters, you must change the phone's language display to Spanish.

To enter Spanish characters

1. Make sure your phone's display is set to Spanish. See "To change the language displayed on your phone" on page 28.
2. Enter the characters using abc normal text entry mode.

The special characters corresponding to each key in Spanish are shown here:

Spanish

2abc A Á B C 2

3def D E É F 3

4ghi G H I Í 4

6mno M N Ñ O Ó 6

8tuv T U Ü Ú V 8

To change the language displayed on your phone

1. From the home screen, select **Menu** → **Settings** → **Display** → **Language**.
2. Select the language from the list and press OK.
   All of your phone screens appear in the selected language.

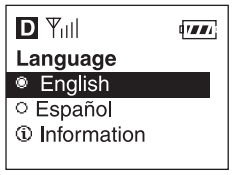

Working with Contact Cards

All phone numbers you save on the phone are saved in contact cards. To make dialing simple, you can assign speed dialing locations to your contacts so that you can call them with a press of a number key.

You can even set your phone to speed dial an automated service such as voicemail, pause for the voice prompt, then dial a voicemail extension or calling card number for you, all in one speed dialing location.

To save a phone number from the home screen

Enter number

1. From the home screen, enter the phone number you want to save.

Enter a pause

If you are entering the phone number of an automated service such as voicemail that requires a pause, take these steps.

a. Enter the first portion of the phone number.

b. Press ⟨⟩ right through the list of options at the bottom of the screen.

c. Press OK to select a type of pause.

Time Pause causes the phone to stop dialing for two seconds.

Hard Pause causes the phone to stop dialing until you select **Release**.

d. Enter the remaining numbers.

Create new contact or add number to existing contact

2. Do one of the following to add the number to a contact card.

- To create a new contact card for this number:

a. Press OK to select **Save New**.

b. Enter a name for the contact.
If you need to know how to use the keypad to enter letters, see page 24.

c. Press OK twice to select **Save.**

- To add this phone number to an existing contact:

a. Press ⟨⟩ right, then press OK to select **Add to**.

b. Press ⟨⟩ up or down to find the contact you want to add to.

c. Press OK to select **Save.**
A message appears: "Contact Successfully Saved!"

Modify contact

3. To create a speed dial location or to make any changes to this contact card, do the following:

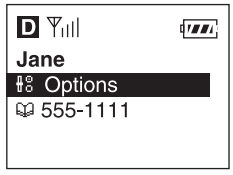

a. Select **Options** and press OK.

b. Press ⟨⟩ up or down and press OK to select an option from the list:

- **Add New**—Add a phone number, email address, street address, URL (Web site), or note to the contact:
- **Phone Number**—You can add up to six phone numbers for each contact.

- **Email Address**—You can add up to two email addresses for each contact.
- **Street Address**—You can add up to two street addresses for each contact.
- **URL**—You can add up to two URLs for each contact.
- **Note**—You can add a note of up to 250 characters to each contact.

■ **Erase Contact**—Erase the entire contact. A message appears: "Erase the entire contact?" Select **Yes** to erase the contact, or **No** to cancel. (To erase specific information from a contact, such as a phone number, see "To erase information from a contact card" on page 34.)

■ **Edit Name**—Edit the name associated with the contact.

■ **Classify Contact**—Classify the contact as **business** or **personal** so that it will appear in your list of business or personal contacts and so that incoming calls from this contact will have a distinctive business or personal ring if you have set a different ringer for each type. (To set different ringers for business and personal calls, see "Sounds" on page 40.)

■ **Exit**—Return to the home screen without saving modifications made in this step.

c. Press (OK) to select **Save.**
A message appears: "Contact Successfully Saved!"

4. To make additional changes, repeat Step 3. To return to the home screen, press (◀◀).

To save a phone number through the Contacts directory

1. From the home screen, select **Menu** → **Contacts** → **Add New**.

2. Press (OK) to select **Phone Number.**

3. Enter the phone number.

Enter a pause

If you are entering the phone number of an automated service such as voicemail that requires a pause, take these steps.

a. Enter the first portion of the phone number and press (OK).

b. Press (◆) right through the list of options at the bottom of the screen.

c. Press OK to select a type of pause.

Time Pause causes the phone to stop dialing for two seconds.

Hard Pause causes the phone to stop dialing until you select **Release**.

d. Enter the remaining numbers.

4. Press OK twice to select **Next.**

Enter contact name

5. Enter a name for the contact.
If you need to know how to use the keypad to enter letters, see page 24.

6. Press OK to select **Save**.

Modify contact

7. To create a speed dial location or to make any changes to this contact card, do the following:

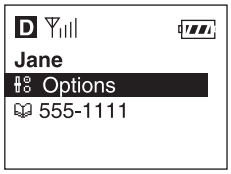

a. Select **Options** and press OK.

b. Press up or down and press OK to select an option from the list:

- **Add New**—Add a phone number, email address, street address, URL (Web site), or note to the contact:
  - **Phone Number**—You can add up to six phone numbers for each contact.
  - **Email Address**—You can add up to two email addresses for each contact.
  - **Street Address**—You can add up to two street addresses for each contact.
  - **URL**—You can add up to two URLs for each contact.
  - **Note**—You can add a one note of up to 250 characters to each contact.
- **Erase Contact**—Erase the entire contact. A message appears: "Erase the entire contact?" Select **Yes** to erase the contact, or **No** to cancel. (To erase specific information from a contact, such as a phone number, see "To erase information from a contact card" on page 34.)
- **Edit Name**—Edit the name of the contact.
- **Classify Contact**—Classify the contact as **business** or **personal** so that it will appear in your list of business or personal contacts and so that incoming calls from this contact will have a distinctive business or personal ring if you have set a different ringer for each type. (To set different ringers for business and personal calls, see "Sounds" on page 40.)
- **Exit**—Return to the home screen without saving modifications made in this step.

c. Press OK to select **Save.**
A message appears: "Contact Successfully Saved!"

8. To make additional changes, repeat Step 7. To return to the home screen, press .

To open a saved contact card

1. Find your contact from the home screen in one of the following ways:
   - To view an alphabetical list of all saved contacts, press ⟨⟩ down.
   - To view your list of Speed Dial, Business, or Personal contacts, select **Menu** → **Contacts**, then select a list and press (OK).

Note To classify a contact as a speed dial number or as a business or personal contact, see "Modify contact" on page 29 and page 31.

   - To search for a specific name, select **Find Name**, enter the first three or four letters of the name, and press (OK) to select **Find.**
   - To search for a specific phone number, enter the phone number, press ⟨⟩ right to select Find, and press (OK).
     A list of contacts appears.
2. Press ⟨⟩ up or down to scroll through the list.
3. Press (OK) to select the contact you want.

To edit a contact card

To add to, change, or erase a contact, take these steps.

You can modify the contact itself–for example, classify it as business or personal (page 32) or you can modify an element of the contact, such as a phone number, email address, street address, URL, or note (page 33).

Modify a contact

1. Open the contact you want to edit. (For directions, see "To open a saved contact card" on page 32.
2. Select **Options** and make any of the following changes:

Note When you select **Options,** any changes you make affect the entire contact. If you want to change specific information about the contact, such as the phone number, select the phone number.

   - **Add New**—Add a phone number, email address, street address, URL (Web site), or note to the contact:
     - **Phone Number**—You can add up to six phone numbers for each contact.
     - **Email Address**—You can add up to two email addresses for each contact.
     - **Street Address**—You can add up to two street addresses for each contact.
     - **URL**—You can add up to two URLs for each contact.
     - **Note**—You can add a one note of up to 250 characters to each contact.

- **Erase Contact**—Erase the entire contact. A message appears: "Erase the entire contact?" Select **Yes** to erase the contact, or **No** to cancel. (To erase specific information from a contact, such as a phone number, see "To erase information from a contact card" on page 34.)
- **Edit Name**—Edit the name associated with the contact.
- **Classify Contact**—Classify the contact as **business** or **personal** so that it will appear in your list of business or personal contacts and so that incoming calls from this contact will have a distinctive business or personal ring if you have set a different ringer for each type. (To set different ringers for business and personal calls, see "Sounds" on page 40.)
- **Exit**—Return to the home screen without saving modifications made in this step.

3. If finished, press (OK) to select **Save**.

Modify an element of a contact

1. Open the contact you want to edit. (For directions, see "To open a saved contact card" on page 32.)
2. Select the item you want to edit, such as the phone number. The options below are available if you select the phone number; options may vary if you select another item, such as the email address.
   - **View Number**—The phone number and its type (such as **work, home, mobile, pager,** or **fax**) appear. Select **OK** to return to the list of options.
   - **Speed Dialing**—Assign a speed dialing location to this phone number. For more information about assigning speed dialing locations, see "To assign a speed dialing location" on page 19.
   - **Erase Number**—Erase this phone number. Select **No** to cancel, or **Yes** to erase this phone number.
   - **Edit Number**—Make changes to this phone number.
   - **Secret**—Mark this phone number as secret. For more information on secret phone numbers, see "To save a phone number through the Contacts directory" on page 30.
   - **Primary Number**—Mark this phone number as the primary number for this contact. You can call a contact's primary number automatically when you select the contact and press (↶).
   - **Edit Type**—Assign or change the type of phone number, such as **work, home, mobile, pager,** or **fax.**
   - **Exit**—Return to the home screen.
3. If finished, press (OK) to select **Save**.

To erase information from a contact card

You can erase an entire contact or erase selected information (such as a phone number) from a contact.

Erase an entire contact

1. Open the contact you want to edit. (For directions, see "To open a saved contact card" on page 32.
2. Select **Options** to erase the entire contact card.
3. Select **Erase Contact**.

   A message appears: "Erase the entire contact?".
4. Select **Yes** to erase the entire contact, or **No** to cancel.
5. If finished, press (OK) to select **Exit**.

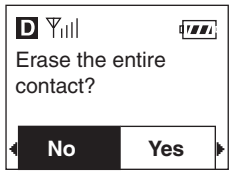

Erase selected information from a contact

1. Open the contact you want to edit. (For directions, see "To open a saved contact card" on page 32.
2. Select the specific information (such as the phone number) you want to erase.
3. Select **Erase Number, Erase Address,** or **Erase Note.**
   - A message appears: "Erase this number/address/note?"
   - Select **Yes** to erase, or **No** to cancel.
4. If finished, press (OK) to select **Exit**.

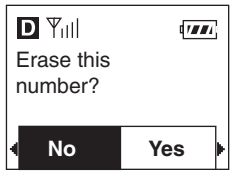

To call from the Contacts directory

1. Find your contact from the home screen in one of the following ways:
   - To view an alphabetical list of all saved contacts, press ⟨⟩ down.
   - To view your list of Speed Dial, Business, or Personal contacts, select **Menu** → **Contacts**, then select a list and press OK.
     Note: To classify a contact as a speed dial number or as a business or personal contact, see "Modify contact" on page 29 and page 31.
   - To search for a specific name, select **Find Name**, enter the first three or four letters of the name, and press OK to select **Find.**
   - To search for a specific phone number, enter the phone number, press ⟨⟩ right to select **Find**, and press OK.

     A list of contacts appears.
2. Press ⟨⟩ up or down to scroll through the list.
3. Highlight a contact and do one of the following:
   - If you have saved a Primary Number for this contact (see page 29), just press ☎ to call that number.
   - Otherwise, press OK to open the contact you want. Then select the phone number and press ☎.

Chapter 5

Settings

The settings on your phone allows you to customize features such as the type of ringer you hear, the volume of the key beeps and ringer, and your phone's display screens.

In this chapter

- Silence All page 38
- Keyguard page 39
- Sounds page 40
- Display page 42
- Security page 44
- Call Information page 46
- Network page 47
- Extras page 49
- Messaging page 50
- Alerts page 51
- Accessories page 52

The Settings menu includes the following options.

Silence All

- No, normal
- Yes, vibe only
- Yes, lights only

Keyguard

- Guard Now
- 30 s auto-guard
- 1 m auto-guard
- 5 m auto-guard
- Auto-guard off

Sounds

- Call Ring/Vibe
- Ringer Volume
- Ringer Type
- Business Call Ring
- Personal Call Ring
- Roaming Ringer
- Earpiece Volume
- Key Beep Volume
- Key Beep Length
- Key Beep Sound
- Missed Call Alert
- Smart Sound (for more information, see page 9)
- Minute Alert

Display

- Backlighting
- My Banner
- Shortcut Key
- Main Menu View
- Auto-Hyphenation
- Language
- Time/Date Format
- Display Contrast

Security (you must enter your four-digit lock code to access these menus)

- Lock Phone
- Limit Calls Out
- Change Lock Code
- Erase All Contacts
- Erase Recent Calls
- Phone Reset

Call Information

- Recent Calls Timer
- All Calls Timer
- Browser Timer

Network

- Data/Fax Calls In
- Privacy Alert
- Roam/Srvc Alert
- Roam Option
- Digital or Analog

Extras

- Fast Find
- 1-Touch Dialing
- Browser Prompt

Messaging

- Voicemail Number
- Auto-Erase Text
- Msg Auto-Save
- Voicemail Alert
- Page Alert
- Message Alert
- Net Alerts

Accessories

- Power Backlighting
- Headset Ringing
- Auto-Answer

Silence All

To silence the ringer or alert

- To silence the ringer or stop the vibration alert temporarily during an incoming call, press (⏻①). To answer the call, press (📞) immediately.

To change the vibration, backlight, or silent ringer setting

You can silence all phone sounds, including the ringer and all alerts, while leaving the phone on. You can also set the phone to vibrate or light up instead of ringing.

1. Select **Menu** → **Settings** → **Silence All**.
2. Highlight an option and press (OK) to select it:
   - **No, normal**—The ringer and all alert sounds are turned on. To change the ringer volume and ringer type, see
   - **Yes, vibe only**—Silence all sounds and set the phone to vibrate. 🔕 appears on the phone screen.
   - **Yes, lights only**—Silence all sounds and set the phone to light up. 🔕 appears on the phone screen.

Keyguard

The keyguard locks your keypad to protect your phone against accidental keypresses and accidental calls when the phone is turned on and a call is not in progress. Keyguard does not prevent you from answering or silencing an incoming call.

To turn keyguard on

1. Select **Menu** → **Settings** → **Keyguard**.
2. Highlight one of the locking options and press OK to save:
   - **Guard Now**—Locks the keypad immediately.
   - **30 s auto-guard**—Locks the keypad if no keys are pressed for 30 seconds.
   - **1 m auto-guard**—Locks the keypad if no key is pressed for one minute.
   - **5 m auto-guard**—Lock the keypad if no key is pressed for five minutes.
   - **Auto-guard off**—Unlocks the keypad and returns it to normal.

To turn keyguard on quickly from the home screen, press ⟨⟩ left and hold for several seconds.

To turn keyguard off

- Press 1 → 2abc → 3def in this order.

Sounds

You can change the alert sounds your phone makes.

1. Select **Menu** → **Settings** → **Sounds**.
2. Press down to scroll through the list of options, and press OK to select an option:
   - **Call Ring/Vibe**—Set the phone to ring or vibrate for incoming calls by selecting an option from the list:
     - **Ring only**—When you receive an incoming call, the phone rings using the ringer type you have selected.
     - **Vibrate only**—When you receive an incoming call, the phone vibrates.
     - **Vibrate then ring**—When you receive an incoming call, the phone vibrates first, then if you have not acknowledged the call, the phone rings using the ringer type you have selected.
   - **Ringer Volume**—Press left to turn the ringer volume down. Press right to turn the ringer volume up.
   - **Ringer Type**—Select from a variety of built-in ringer sounds, including standard ringers, songs, and whistles.
     You can download additional ringers if you have a PC, Kyocera Phone Desktop software, and a data cable. For more information, visit **www.kyocera-wireless.com.**
   - **Business Call Ring**—You can distinguish between your business calls and your personal calls by selecting a different ringer for each. Select from a variety of built-in ringer sounds, including standard ringers, songs, and whistles. To learn how to set up contacts as **business** or **personal**, see page 30.
   - **Personal Call Ring**—You can distinguish between your business calls and your personal calls by selecting a different ringer for each. Select from a variety of built-in ringer sounds, including standard ringers, songs, and whistles. To learn how to set up contacts as **business** or **personal**, see page 30.
   - **Roaming Ringer**—Select an option from the list:
     - **Disabled**—The phone does not use a special ringer to indicate calls that may be subject to roaming charges.
     - **Enabled**—When you receive an incoming call that may be subject to roaming charges, the phone rings using a special ringer.
   - **Earpiece Volume**—Press left to turn the earpiece volume down. Press to turn the earpiece volume up.
   - **Key Beep Volume**—Set the sound you hear when you press any key on the keypad. Press left to turn the key beep volume down. Press right to turn the key beep volume up.

- **Key Beep Length**—This setting controls the length of key beeps. Select an option from the list:
  - **Normal**—Normal length key beeps.
  - **Long**—Long length key beeps may be useful for automated dial-in systems, such as voicemail. Some older voicemail systems require **Long** key beeps.
- **Key Beep Sound**—If the volume is turned on, you can set the sound you hear when you press a key.
- **Missed Call Alert**—Select **Enabled** if you want to have the phone alert you when you have missed a call. Select **Disabled** if you do not want to be alerted.
- **Smart Sound**—If this setting is **Enabled**, Smart Sound automatically adjusts the earpiece volume based on the amount of noise around you or the other person's voice volume level. Once you have enabled Smart Sound, follow the instructions in "To adjust the earpiece volume" on page 9.
- **Minute Alert**—You can alert you of elapsed time during a call with a short beep ten seconds before each minute passes.

Display

To change the appearance of your phone's screen, complete the following steps:

1. Select **Menu** → **Settings** → **Display**.
2. Press ⟨⟩ down to scroll through the list of options, and press OK to select an option:
   - **Backlighting**—Backlighting causes the screen and keypad to light up when you press a key. You can select from the following backlighting options:
     - **Disabled**—Backlighting is not used.
     - **10 seconds**—Backlighting is on for approximately 10 seconds after a keypress.
     - **30 seconds**—Backlighting is on for approximately 30 seconds after a keypress.
     - **10 sec. & in call**—Backlighting is on for approximately 10 seconds after a keypress, and during a call.
     - **30 sec. & in call**—Backlighting is on for approximately 30 seconds after a keypress, and during a call.

     Tip: If backlighting is frequently on, your phone's battery will drain more quickly. To optimize your battery's performance, select **10 seconds**.
   - **My Banner**—Customize the banner displayed on your home screen. Press ⟨⟩ right, then press OK to select **Edit** from the options at the bottom of the screen to change what is currently displayed. If you need to know how to use the keypad to enter letters, see page 24.
   - **Shortcut Key**—Create a shortcut to the feature you use most often. Once the shortcut is created, you will be able to access it by pressing ⟨⟩ up and holding.
     - **None**—Exit without setting a shortcut key
     - **InBox**—Text messaging InBox
     - **Send New Msg**—A blank text messaging screen
     - **Ringer Volume**—Ringer volume adjustment screen
     - **Recent Calls**—Recent Calls list
     - **Business List**—List of contacts classified as "business"
     - **Personal List**—List of contacts classified as "personal"
     - **Web Browser**—Web browser
   - **Main Menu View**—Set the appearance of the menus you see when you select **Menu** from the home screen. Select from the following options:
     - **Small Icons**—Menus appear as small icons.

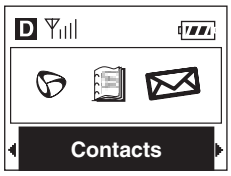

– **Large Icons**—Menus appear as large icons.

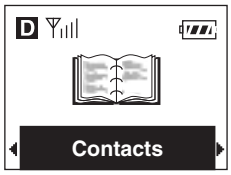

– **List Menus**—Menus appear in a list.

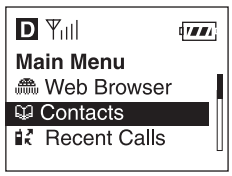

- **Auto-Hyphenation**—Select **Enabled** if you want the phone to automatically enter hyphens when you enter a phone number. Select **Disabled** if you do not want the phone to automatically enter hyphens when you enter a phone number.
- **Language**—Select the language in which all text on your phone appears. Your phone may support English or Spanish. Check with your service provider for availability.
- **Time/Date Format**—Select how the time and date is displayed on the home screen. You can select from several options, including displaying time in 12- or 24-hour format, and displaying dates in day/month format or month/day format.
- **Display Contrast**—Set the appearance of the phone's display screen. You can select **Highest, High, Medium, Low,** or **Lowest**. The default setting is **Medium**.

Security

You must enter your four-digit lock code (typically 0000 or the last 4 digits of your phone number) to set any of the options on the **Security** menu.

To lock and unlock the phone

You can lock your phone to prevent unauthorized access to it. When you lock your phone, you can only call a number your service provider has set up as an emergency number, a service provider number, or a priority number. You can still receive incoming calls.

To lock the phone

1. Select **Menu** → **Settings** → **Security** → **Lock Phone**.
2. Select an option:
   - **Never**—Do not lock the phone.
   - **On power up**—Lock the phone every time you turn it on.
   - **Now**—Lock the phone immediately.
3. Press (OK) to save the setting.

To unlock the phone

- Select **Unlock** and enter your four-digit lock code (usually 0000 or the last four digits of your phone number).

To limit calls out

- Select **Menu** → **Settings** → **Security** → **Limit Calls Out**. Select an option:
  - **No**—Do not limit calls.
  - **Yes, to Contacts**—Allow calls to contacts only.

To change your lock code

1. Select **Menu** → **Settings** → **Security** → **Change Lock Code**.

   A message appears: "Change Lock Code?"
2. Do one of the following.
   - Select **Yes** and enter a new code, then press (OK) . Enter your new lock code again to verify it.
   - Select **Exit** to leave your lock code unchanged.

To erase all contacts

- Select **Menu** → **Settings** → **Security** → **Erase All Contacts**. Select an option:
  - **No**—Contacts are unchanged.
  - **Yes**—Erase all contacts. A message appears: "Erase ALL contacts?" Select **No** to cancel, or **Yes** to erase all contacts.

To erase recent calls

- Select **Menu** → **Settings** → **Security** → **Erase Recent Calls**. Select an option:
  - **No**—Recent Calls list is unchanged.
  - **Yes**—Erase all recent calls. A message appears: "Erase ALL recent calls list entries?" Select **No** to cancel or **Yes** to erase all recent calls.

To reset the phone

- Select **Menu** → **Settings** → **Security** → **Phone Reset**. Select an option:
  - **No**—Cancel and return to the **Security** menu.
  - **Yes**—Reset the phone. A message appears: "Reset ALL phone settings?" Select **No** to cancel or **Yes** to reset the phone.

Your four-digit lock code, Recent Calls timer, Contacts directory, Text InBox and Text OutBox contents, and service programming are not reset when you reset your phone.

Call Information

This setting allows you to view information about calls and alerts.

Recent Calls Timer

This timer displays the total number and duration of recent calls you have made and received. Press (OK) to select **Reset** and reset the timer to zero.

All Calls Timer

This timer displays the total number and duration of all calls you have made and received. You cannot reset this timer.

Browser Timer

This timer displays the total duration of data calls you have made. Press (OK) to select **Reset** and reset the timer to zero.

Network

Use this setting to view or change options such as roaming and privacy alerts. Some settings may not be available on all phones.

To select digital or analog mode

This setting is not available on the Kyocera 2119 phone, which is digital only.

1. Select **Menu** → **Settings** → **Network** → **Digital or Analog**.
2. Press (OK) to select an option:
   - **Automatic**—Automatically switch the phone between digital and analog.
   - **Analog only**—Set the phone to work in analog mode only.
   - **Analog call**—Force a call into analog mode for the duration of the next call.
   - **Digital only**—Set the phone to work in digital mode only.

Roam Option

This setting determines which signals your phone accepts.

1. Select **Menu** → **Settings** → **Network** → **Roam Option**.
2. Press (OK) to select an option:
   - **Automatic (recommended setting)**—Accept any system the phone service provides.
   - **No Roaming**—You cannot make or receive calls when you are roaming.

Roam/Service Alert

Use this setting to have the phone alert you when you roam outside of your home service area.

1. Select **Menu** → **Settings** → **Network** → **Roam/Srvc Alert**.
2. Press (OK) to select an option:
   - **Disabled**—You are not alerted if you roam outside your home service area.
   - **When no service**—You are alerted with three tones, decreasing in intensity, when service is lost. When service is acquired again, you will hear three tones in increasing intensity.
   - **On roam change**—Alerts you with two tones, decreasing in intensity, when roaming service is acquired. When home area service is acquired again, you hear two tones, increasing in intensity.
   - **On any change**—Alerts you with three increasing tones if there is a change in roaming service or three decreasing tones if the phone loses service.

Privacy Alert

1. Select **Menu** → **Settings** → **Network** → **Privacy Alert**.
2. Press (OK) to select an option:

- **Disabled**—Do not play any alerts.
- **Enabled**—Play an audible alert whenever enhanced privacy is lost or regained and a call is in progress.

An alert message always shows on the screen, regardless of these settings.

Data/Fax Calls In

These settings tell the phone how to handle voice and data calls.

1. Select **Menu** → **Settings** → **Network** → **Data/Fax Calls In**.
2. Press (OK) to select an option:
   - **Voice Only**—Allow only voice calls.
   - **Fax, next call**—Set the phone to fax mode for the next incoming call or the next ten minutes.
   - **Data, next call**—Set the phone to data mode for the next incoming call or the next ten minutes.
   - **Fax, until off**—Force the phone into fax mode until the phone is turned off.
   - **Data, until off**—Force the phone into data mode until the phone is turned off.

Extras

These settings allow you to program various options.

1-Touch Dialing

You can turn 1-Touch Dialing off and on from this setting.

1. Select **Menu** → **Settings** → **Extras** → **1-Touch Dialing**.
2. Press OK to select an option:
   - **Disabled**—1-Touch Dialing is off.
   - **Enabled**—1-Touch Dialing is on. To use 1-Touch Dialing to make a call, see "To use 1-Touch Dialing" on page 21.

Browser Prompt

You can receive a prompt whenever you attempt to start or exit the browser.

1. Select **Menu** → **Settings** → **Extras** → **Browser Prompt**.
2. Press OK to select an option:
   - **At Start**—Prompt you when you start the browser.
   - **At End**—Prompt you when you exit the browser.
   - **Both**—Prompt you when you start the browser and when you exit the browser.
   - **No Prompts**—You do not receive any prompts.

Messaging

For detailed information on how to send, retrieve, and store messages, see the Messages chapter, beginning on page 53.

The messaging settings allow you to set how you want to handle incoming and outgoing messages.

To change your voicemail number

You can change the phone number assigned to speed dialing location "1" by doing the following:

1. Select **Menu** → **Messages** → **Msg Settings** → **Voicemail Number**.
2. Select **Edit** to change the number that is currently assigned to speed dial location "1."
3. Enter the new number, then select an option:
   - **Save** saves the new number.
   - **Time Pause** enters a time pause in the number. See Enter a pause on page 29.
   - **Hard Pause** enters a hard pause in the number. See Enter a pause on page 29.

To erase messages automatically

Use this setting to erase old messages and free up phone memory.

1. Select **Menu** → **Settings** → **Messaging** → **Auto-Erase Text**.
2. Press (OK) to select an option:
   - **Disabled** does not erase messages.
   - **Old InBox** automatically erases old, read messages.

Alerts

You can select how you want to receive alerts for voicemail, pages, text messages, and the Web Browser.

1. Select **Menu** → **Settings** → **Messaging**, then scroll down in the list to select a type of alert (**Voicemail Alert, Page Alert, Message Alert,** or **Net Alerts**).
2. Press (OK) to select an option:
   - **Disabled**—You are not alerted when a message is received.
   - **Vibrate once**—The phone vibrates once when a new message is received.
   - **Vibe & remind**—The phone vibrates once when a new message is first received, and a reminder vibrates approximately every five minutes until the message is acknowledged by pressing (◀◀) or (⏻), or selecting **Ignore** from the bottom of the screen.

Note If a message is received while you are on a call, the phone does not vibrate to remind you.

   - **Low beep once**—The phone beeps once at a low volume when a message is received.
   - **Low beeps**—The phone beeps approximately every five minutes at a low volume until the message is acknowledged by pressing (◀◀) or (⏻), or selecting **Ignore** from the bottom of the screen.
   - **Loud beep once**—The phone beeps once at a high volume when a message is received.
   - **Loud beeps**—The phone beeps at a high volume approximately every five minutes until the message is acknowledged by pressing (◀◀) or (⏻), or selecting **Ignore** from the bottom of the screen.

Accessories

Your phone comes with several features for additional convenience.

Power Backlighting

This allows backlighting to remain on when external power, such as a travel charger, is used with the phone.

1. Select **Menu** → **Settings** → **Accessories** → **Power Backlighting.**
2. Select **Normal** to keep the default setting (recommended), or **Always on** to keep backlighting on.

Note

Setting backlighting to **Always on** increases your charging time. For this reason, the backlighting will not stay on if you are using the Standard AC Adapter provided with the phone.

Headset Ringing

When a headset is attached to the phone, you may choose to have alert sounds come out of either the phone or the headset.

1. Select **Menu** → **Settings** → **Accessories** → **Headset Ringing**.
2. Select **Out of phone** to have the alerts come out of the phone, or **Out of headset** to have alerts come out of the headset.

Auto-Answer

If your phone is attached to a Portable Hands-free Car Kit (sold separately), you may set it to answer an incoming call after 5 seconds.

- Select **Menu** → **Settings** → **Accessories** → **Auto-Answer** → **After 5 seconds**.

Chapter 6

Messages

In this chapter

- Entering Text page 54
- About Text Messages page 58
- Retrieving Messages page 59
- Sending Text Messages page 61
- Message Delivery Options page 64
- Erasing Messages page 65
- Changing Your Voicemail Speed Dialing Location page 67
- Alerts page 68
- Troubleshooting Messages page 69

Entering Text

You can enter letters, numbers, and symbols in a text message. The default text entry mode is abc .

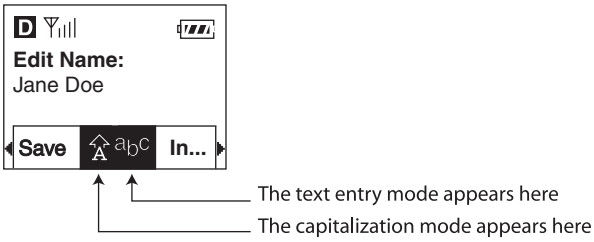

- To enter spaces, press #Space.
- To move the cursor, press ◄► right or left.
- To erase individual characters, press ◄◄.
- To erase all characters, press and hold ◄◄.

Tip

To change text entry modes quickly, press *Text once.
To change capitalization modes, press and hold *Text.

To change text entry modes

Text entry modes are as follows:

abc **Normal Alpha.** Enter one character at a time. See "To use normal text entry mode" on page 55.

T9 **Rapid Entry.** Find words by entering a few characters. See "To use Text Input rapid text entry mode" on page 55.

&?! **Symbols.** Enter punctuation characters. See "To enter symbols" on page 57.

123 **Numbers Only.** Enter numbers. See "To enter numbers" on page 57.

To change text entry modes, take these steps:

1. From the text entry screen, press OK to highlight the options at the bottom of the screen.

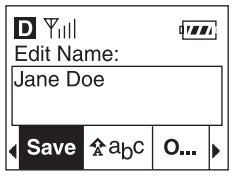

2. Press ⊛ right to highlight the current text entry mode, and press OK to select it.

   The current text entry mode will be abc, T9, &?!, or 123.

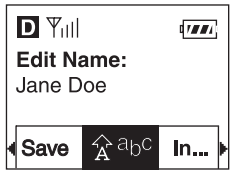

3. A list of text entry modes appears. Press ⊛ to scroll through the list.
4. Press OK to select a text entry mode.

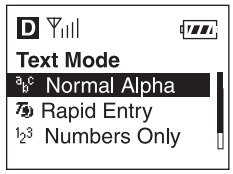

To change capitalization modes

- Press and hold *Text to change capitalization modes. Capitalization modes are as follows:

⇧	The next letter you enter is capitalized.
⇪	Every letter you enter is capitalized.
A	The first letter of each sentence is capitalized.
blank	Every letter you enter is in lower case.

To use abc normal text entry mode

abc normal text entry allows you to enter text using one keypress per letter.

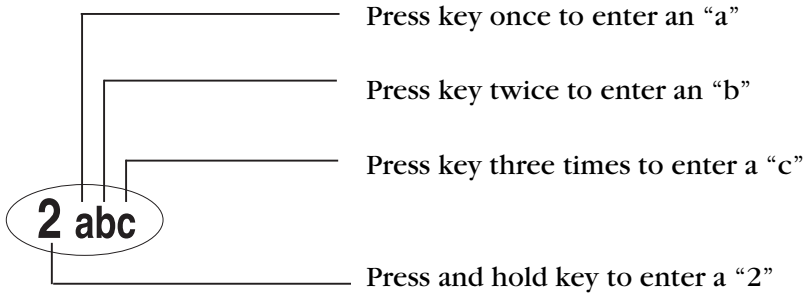
2 abc
Press key once to enter an “a”
Press key twice to enter an “b”
Press key three times to enter a “c”
Press and hold key to enter a “2”

Two seconds after you choose a character or number, the cursor moves one space to the right.

To use T9 Text Input rapid text entry mode

T9® Text Input rapid text entry mode (available in English only for the 2100 Series phones) allows you to enter text quickly by anticipating the word you are entering. T9 accesses a dictionary of words in an attempt to match certain key combinations with words.

To enter words

1. Press each letter key once.
   For example, to enter the word “how,” press keys 4ghi → 6mno → 9wxyz .

Note

Wait until you have entered the entire word before checking the screen to see if the word shown is correct. Each time you press a key, the software will "guess" different words. You must enter all characters before it can find your word.

Several options may be listed, but only one appears on your screen at a time.

2. If the word that appears on the screen is not the word you want, press (0 Next) to cycle through the available words, then press (# Space) or press ⟨⟩ right to select the word you want.

Note

If the word you want is not listed, switch to abc mode and enter it. Once you enter the word, it will be saved in the T9 dictionary and it should appear for you the next time you use T9 mode.

To enter punctuation

1. To insert punctuation characters, press (1 ✉@).
2. If the character shown is not the character you want, press (0 Next) to cycle through available characters.
3. Press (0 Next) or press ⟨⟩ right to select the character you want.

Rapid text entry example

The following steps describe how to enter the name "Jane":

Tip

Wait until you have typed the entire word before checking the screen to see if the word shown is correct. In the example below, the word "Jane" will not appear immediately; look at the keypad, not the phone screen, as you enter letters.

1. When you are in the text entry screen, press (* Text) until T9 appears to switch to rapid text entry mode. (See "To change text entry modes" on page 54).
2. Make sure A appears next to T9 at the bottom of the screen. If it does not appear, press and hold (* Text) until it appears.
3. Press (5 jkl) once. The letter "K" appears.
4. Press (2 abc) once. The first letter changes to an "L" and the letter "a" appears next to it.
5. Press (6 mno) once. The first letter changes to a "J", the second letter remains an "a," and the letter "n" appears next to it.
6. Press (3 def). The letter "d" appears.

For more information

For more instructions on how to use T9® Text Input rapid text entry, visit **www.tegic.com**.

To enter symbols

1. From the text entry screen, press ⊕ down to highlight the options at the bottom of the screen.
2. Press ⊕ right to the text entry mode you are currently using.
3. Press OK to select the mode.
4. Press ⊕ down through the list of modes.
5. Highlight &?! **Symbols**, then press OK to select it.
6. Press ⊕ down through the list. Each character is matched to a number key. Press the number key corresponding to the symbol you want to use. For example, to enter a comma, press 8 tuv .
7. To exit the list without entering a symbol, press ◄ .

After entering a symbol, the phone automatically returns to the text entry mode you were previously using.

Tip To cycle through a short list of symbols in abc or T9 Text Input mode, press 1 ✉@

To enter numbers

The number setting allows you to enter numbers using the number keys.

- When you're using number mode, press a key once to enter the number on the key.

Tip To enter numbers in abc or T9 mode, press and hold a key until the number appears on the screen.

To change language and enter special characters

Your phone may support the English and Spanish languages. To enter Spanish characters, you must change the phone's language display to Spanish.

To enter Spanish characters

1. Make sure your phone's display is set to Spanish. See "To change the language displayed on your phone" on page 58.
2. Enter the characters using abc normal text entry mode.

The special characters corresponding to each key in Spanish are shown here:

Spanish

2abc A Á B C 2

3def D E É F 3

4ghi G H I Í 4

6mno M N Ñ O Ó 6

8tuv T U Ü Ú V 8

To change the language displayed on your phone

1. From the home screen, select **Menu** → **Settings** → **Display** → **Language**.
2. Select the language from the list and press OK.
   All of your phone screens appear in the selected language.

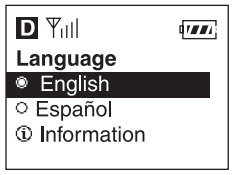

About Text Messages

- New, unread messages are stored in your **Text InBox** and are **bold**.
- Once you have read a message, you can save it to your **Filed** folder, erase it, or leave it in your **Text InBox**.
- All of the following procedures start at the home screen unless otherwise indicated.

Retrieving Messages

When you receive a text message, a page, or a voicemail message, appears on your phone screen. To retrieve voice messages, see "To check voicemail from the New Messages alert screen," below. To retrieve text messages, see "To check text messages from the New Messages alert screen" on page 60.

To check voicemail from the New Messages alert screen

1. Press OK to select **Voice.**
2. Press down to select a message from the list.
3. Follow your service provider's voice menus to listen to the messages.
4. To return to the list of messages, select **Done.**

If you select **Ignore** at the New Messages alert screen, you can check voicemail from the home screen later.

To check voicemail from the home screen

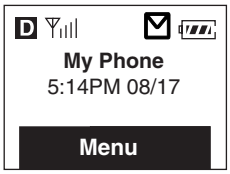

A voicemail number may have been pre-programmed into your phone. Check with your service provider.

To check voicemail from the home screen, do one of the following:

- Press and hold 1 to dial your voice mail number.
- Press 1 → .
- Select **Menu** → **Messages** → **Voicemail**, then press .

To check text messages from the New Messages alert screen

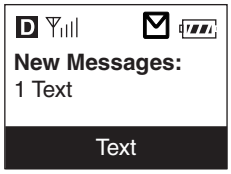

1. Press OK to select **View.**
2. If there's more than one message, select a message from the list.
3. Press left or right to see options. Press OK to select an option.
4. To return to the list of messages, select **Done.**

To check text messages from the home screen

1. From the home screen, select **Menu** → **Messages** → **Text InBox**.
   The number of messages will appear to the left of the words "Text InBox."
2. Press up or down to scroll through the list of messages.
   ⚠ indicates an "Urgent" message.
3. Press OK to read a message.
4. After you have read the message, select an option from the bottom of the screen:
   - **Reply**—Reply to the sender, if their address is available.
   - **Erase**—Erase the current message. This is advised to save memory in your phone. To set your phone to automatically erase text messages after you have opened them, see "To erase messages automatically" on page 65.
   - **Save**—Save the message to your **Filed** folder.
   - **Sender**—View the sender's information, if it is available. If the information is available, you can save it to the Contacts directory by selecting one of the following options:
     - **OK**—Return to the message screen without saving.
     - **Save New**—Save the sender's information as a new contact. For details on how to save a new contact, see "To save a phone number from the home screen" on page 29.
     - **Add to**—Add the sender's information to an existing contact. For more details on adding information to an existing contact, see "To save a phone number from the home screen" on page 29.
   - **Forward**—Forward the message. Check with your service provider to see if this feature is available in your area.
   - **Done**—Return to the **Text InBox**.
5. If a callback number is included with the message, press to call it.

Sending Text Messages

You can send text messages using your Kyocera 2100 Series phone if this capability is available to you. Check with your service provider for availability.

- To learn how to enter text, see "Entering Text" on page 24.
- If you are sending a message to more than one person, enter a space or a comma between each phone number or email address.
- You can send a message to up to ten contacts. If you are sending a message to more than one contact, the phone automatically inserts a comma between each contact name. The messages are sent one at a time, once to each addressee.

Note Usage charges may apply to each message; check with your service provider.

To send a new message

1. From the home screen, select **Menu** → **Messages** → **Send New**.

Note This option may not be available to you if two-way messaging is not supported by your network. Contact your service provider for more information.

2. Enter the phone number or email address of the person to whom you are sending the message, or select **Contact** to select a phone number or email address from a contact.
3. Press OK to select **Next**.
4. Enter your message and press OK to select **Next**.
5. Press up or down through the list of options. Press OK to select an option:
   - **Send Message**—Send the message immediately and save it in your **Text OutBox**.
   - **Callback Number**—Add a callback number to the message. See "To add a callback number to a message" on page 64.
   - **Delivery Receipt**—Send a notification to your phone when the recipient receives the message.
   - **Priority**—Mark the message **Normal** or **Urgent**.
   - **Send Later**—Schedule delivery of this message. See "To send a message at a scheduled time" on page 64.
   - **Save Message**—Save the message in your **Filed** folder.
   - **Exit**—Exit without saving.

Note If you select an option such as **Callback Number** or **Priority**, you are returned to the **Options** screen. Select another option such as **Send Message** to send the message.

To send a preset message (AutoMsg)

Your Kyocera 2100 Series phone contains the following preset messages. You can select one from the list and incorporate it into your text message.

Call me	Thank you
Hi there!	Where are you?
Need directions	Who sent this?
What's up?	I'll call later
What should we do for dinner?	On my way
I'll be there in 15m	I love you
I'm delayed	What are you doing this weekend?
Busy	Yes
No	You're welcome
Have a great day!	Bad weather on the way

1. From the home screen, select **Menu** → **Messages** → **Send New.**

Note If you select an option such as **Callback Number** or **Priority**, you are returned to the **Options** screen. Select another option, then select **Send Message** to send the message.

2. Enter the phone number or email address of the person to whom you are sending the message, or select **Contact** to select a phone number or email address from a contact.
3. Press OK twice to select **Next**.

   At the Message screen, press OK once, then press right to select **AutoMsg.**
4. Press OK.
5. Scroll through the list of preset messages and press OK to select one.

   The Message screen reappears with the preset message in it.
6. You may add more text or add another preset message.
   - To add another preset message to your text message:
     a. Press OK twice to select **AutoMsg.**
     b. Select another message from the list.
     c. Press OK.

        The Message screen reappears with the preset message in it.
   - To add text, press right to move the cursor, then enter the text.

     To learn how to enter text, see "Entering Text" on page 54.
7. After the message has been entered, press OK.
8. Press right to select **Next** and press OK.
9. Press up or down to scroll through the list of options. Press OK to select an option:

- **Send Message**—Send the message immediately and save it in your **Text OutBox**.
- **Callback Number**—Add a callback number to the message. See "To add a callback number to a message" on page 64.
- **Delivery Receipt**—Send a notification to your phone when the recipient receives the message.
- **Priority**—Mark the message **Normal** or **Urgent**.
- **Send Later**—Schedule delivery of this message. See "To send a message at a scheduled time" on page 64.
- **Save Message**—Save the message in your **Filed** folder.
- **Exit**—Exit without saving.

Note

If you select an option such as **Callback Number** or **Priority**, you are returned to the **Options** screen. Select another option, then select **Send Message** to send the message.

To send a saved message

1. From the home screen, select **Menu** → **Messages** → **Filed**.
2. Press up or down through the list of **Messages**.
3. Press OK to select a message.
4. Select an option from the bottom of the screen (**Resend, Send To, Erase,** or **Done**).
5. Enter the phone number or email address of the person to whom you are sending the message, or select **Contact** to select a phone number or email address from a contact.
6. Press OK to select **Next**.
7. Press OK to select **Next** again, or select an option from the bottom of the screen.
8. Press up or down through the list of options. Press OK to select an option:
   - **Send Message**—Send the message immediately and save it in your **Text OutBox**.
   - **Callback Number**—Add a callback number to the message. See "To add a callback number to a message" on page 64.
   - **Delivery Receipt**—Send a notification to your phone when the recipient receives the message.
   - **Priority**—Mark the message **Normal** or **Urgent**.
   - **Send Later**—Schedule delivery of this message. See "To send a message at a scheduled time" on page 64.
   - **Save Message**—Save the message in your **Filed** folder.
   - **Exit**—Exit without saving.

Note

If you select an option such as **Callback Number** or **Priority**, you are returned to the **Options** screen. Select another option, then select **Send Message** to send the message.

Message Delivery Options

To add a callback number to a message

After creating a message and selecting the **Callback Number** option, do one of the following:

To send your own phone number

- Press (OK) to select **Yes** from the options at the bottom of the screen.

To send a different phone number

1. Press (OK), then press ⟨⟩ right to select **Other** from the options at the bottom of the screen.

2. Enter the phone number.
3. Press (OK) to select **Done**.

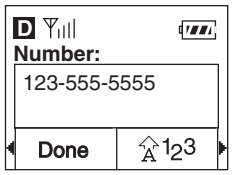

If you do not want to send a callback number

- Press ⟨⟩ right, then press (OK) to select **No** from the options at the bottom of the screen.

To send a message at a scheduled time

After creating a new or preformatted message (see page 64), you can select when you want to send it. Once the **Send Later** option is selected, do the following:

- Select from a list of options for when to send the message (**30 minutes, 1 hour, 2 hours, 12 hours, 1 day, 2 days,** or **3 days**). The message is sent from your phone immediately, then is held by your service provider's network for the specified time before it is sent.
- The scheduled message is stored in your **Text OutBox**.

Note

You can erase a scheduled message from the **Text OutBox**, but you cannot cancel delivery of the message.

Erasing Messages

1. From the home screen, select **Menu** → **Messages** → **Erase Msgs**.
2. Press ⊕ to scroll through the options in the list. Press OK to select an option:
   - **No**—Cancel and return to the **Messages** screen.
   - **Entire InBox**—Erases *all* messages in your **Text InBox**.
   - **Old InBox**—Erase *read* messages in your **Text InBox**.
   - **Entire OutBox**—Erase *all* messages in your **Text OutBox**.
3. A message appears: "Erase ALL?" Select **Yes** to erase messages or **No** to cancel.

To erase messages automatically

Use this setting to automatically erase some text messages. Erasing messages automatically helps to conserve phone memory, so that you can receive new messages even if the memory is low. (This setting does not affect voicemail notifications.)

1. From the home screen, select **Menu** → **Settings** → **Messaging** → **Auto-Erase Text**.
2. Press OK to select an option:
   - **Disabled**—Messages are not automatically erased.
   - **Old InBox**—Old, read messages are automatically erased.

To erase messages one at a time

1. From the home screen, select **Menu** → **Messages**.
2. Press ⊕ down to scroll through the list.
3. Press OK to select the type of message you want to erase (**Voicemail, Text InBox,** or **Filed**).
4. Press OK to select the message you want to erase.
5. Select **Erase** from the options at the bottom of the screen to erase the message. A message appears: "Erase this message?"
6. Select **Yes** to erase the message, or **No** to cancel.

Note You can erase a scheduled message from the **Text OutBox**, but you cannot cancel delivery of the message.

Additional information about message status

Messages stored in your **Text OutBox** have symbols next to them indicating their status. To view information about messages in your **Text OutBox**, complete the following steps:

1. Select **Menu** → **Messages** → **Text OutBox**.
2. Press ⊕ up or down through the list of messages. Press OK to select a message.

One of the following symbols appears next to each message:

⧗	The message is pending and will be sent from your phone when possible. You can cancel delivery of the message.
◷	The message is waiting at the network and is scheduled to be sent. You cannot cancel delivery of the message.
✕	The message has not been delivered due to rejection by the network or lack of service. An alert appears on your phone screen if the message cannot be delivered.
☑	The message has been sent to the network and will soon be sent to the address. You cannot cancel delivery of the message.
☑	The message has been received by the recipient you have specified.
☐	The message has never been sent, or has not been sent since it was last edited. You can cancel delivery of the message.

3. Select **Erase** from the options at the bottom of the screen to erase the message. A message appears: "Erase this message?"
4. Select **Yes** to erase the message, or **No** to cancel.

Note You can erase a message from your **Text OutBox**, shown by ◷, so that it is no longer stored on your phone, but you cannot cancel delivery of the message.

Changing Your Voicemail Speed Dialing Location

You can change the phone number assigned to speed dialing location "1" by doing the following:

1. Select **Menu** → **Messages** → **Msg Settings** → **Voicemail Number**.
2. Select **Edit** to change the number that is currently assigned to speed dialing location "1."
3. Enter the new number, then select an option:
   - **Save**—Save the new number to speed dialing location "1".
   - **Time Pause**—Allows you to enter a timed pause in the number. See "Entering Pauses in Speed Dial Numbers" on page 19.
   - **Hard Pause**—Allows you to enter a hard pause in the number. See "Entering Pauses in Speed Dial Numbers" on page 19.

Alerts

You can choose how you want to receive alerts for voicemail, pages, text messages, and the Web Browser.

1. Select **Menu** → **Settings** → **Messaging**, then the type of alert (**Voicemail Alert, Page Alert, Message Alert,** or **Net Alert**).
2. Press (OK) to select an option:
   - **Disabled**—You are not alerted when a message is received.
   - **Vibrate once**—The phone vibrates once when a new message is received.
   - **Vibe & remind**—The phone vibrates once when a new message is first received, and a reminder vibrates approximately every five minutes until the message is acknowledged by pressing (◀◀) or (⏻), or selecting **Ignore** from the bottom of the screen.
     Note: If a message is received while you are on a call, the phone does not vibrate to remind you.
   - **Low beep once**—The phone beeps once at a low volume when a message is received.
   - **Low beeps**—The phone beeps approximately every five minutes at a low volume until the message is acknowledged by pressing (◀◀) or (⏻), or selecting **Ignore** from the bottom of the screen.
   - **Loud beep once**—The phone beeps once at a high volume when a message is received.
   - **Loud beeps**—The phone beeps at a high volume approximately every five minutes until the message is acknowledged by pressing (◀◀) or (⏻), or selecting **Ignore** from the bottom of the screen.

Troubleshooting Messages

Memory

If your phone is low on memory or out of memory, you may not be able to receive new messages.

Low memory

When memory is more than 75% full, a message appears: "WARNING! Memory is nearly full!"

If you see this alert, take these steps:

1. Do one of the following:
   - Press OK to select **OK**.
   - Press ◀◀ to clear the message.
2. Erase contacts or text messages to free up more memory. See "To erase information from a contact card" on page 34 or "To erase messages one at a time" on page 65.

Out of memory

When memory is completely full, your phone displays a screen such as the following:

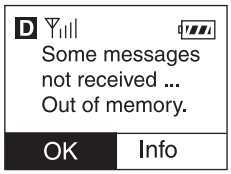

Erase contacts or text messages to free up more memory. See "To erase information from a contact card" on page 34 or "To erase messages one at a time" on page 65.

If you cannot send messages

A message delivery attempt may fail if there is no service or the message is rejected by the network. Your phone will try to send the message again later. If a message cannot be delivered, an alert appears. To clear the alert, do one of the following.

- Press OK to select **OK**.
- Press ⏻ .

If the problem persists, contact your service provider.

Chapter 7

Tools

The Tools menu offers a variety of helpful items.

In this chapter

- Alarm Clock page 71
- Tip Calculator page 72
- Calculator page 73
- Countdown Timer page 74
- Stopwatch page 75
- Brick Attack™ page 76

Alarm Clock

Use the Alarm Clock to set an alert for a specific time. The alert occurs only if the phone is on.

Note

Your phone must be in CDMA digital mode (D appears in the upper-left corner of your phone screen) in order to use the Alarm Clock.

1. Select **Menu** → **Tools** → **Alarm Clock** → **Set**.
   - Press up or down to change the hour, minutes, and a.m./p.m.
   - Press left or right to switch between hours, minutes, and a.m./p.m.
2. Press OK to save.
3. When the alarm rings, select **Snooze** to silence the alarm for 10 minutes, or select **Off** to turn off the alarm.

Tip Calculator

1. Select **Menu** → **Tools** → **Tip Calculator**.
2. Enter the amount of your bill and press OK.
3. Select the amount you want to include as a tip (**15%, 18%, 20%, 10%, 5%, Other**) and press OK .
4. Your total bill, including tip, is calculated and displayed.
5. To split the bill, press ⊕ right and press OK to select **Split**.
6. Enter the number of guests and press OK . The amount due from each guest appears.

Calculator

Use the calculator for basic mathematical equations.

1. Select **Menu** → **Tools** → **Calculator**.
2. Use the keypad to enter numbers.
3. Press OK to select mathematical operations.

=	Performs the “equals” function.
÷	Inserts the division character after the last number entered.
-	Inserts the subtraction character after the last number entered.
+	Inserts the addition character after the last number entered.
X	Inserts the multiplication character after the last number entered.
.	Inserts the decimal point after the last number entered.
C	Clears all numbers entered and displays a zero.
MR	Displays the value currently stored in memory.
M+	Adds the displayed digit to the value stored in memory.
MC	Clears the value currently stored in memory.
±	Changes the sign of the displayed number.
◀◀	Clears one function or one digit from the screen and returns the calculator to digit entry mode. Hold down to clear all of the digits and operations and display a zero.
⏻	Exits the calculator and returns to the home screen.

Countdown Timer

This timer counts down for a specified amount of time. It beeps, using the volume set for alerts, when that amount of time has elapsed.

1. Select **Menu** → **Tools** → **Countdown**.
2. Press OK to **Set**.
3. Press up or down to set the hours, minutes, and seconds. To move the cursor, press left or right.
4. Select **Start** to begin the countdown.
5. Select **Stop** to pause the countdown.
6. When the alarm rings, press to silence it.

Stopwatch

1. Select **Menu** → **Tools** → **Stopwatch**.
2. Select **Start** to have the stopwatch begin counting.
3. Select **Stop** to stop counting.
4. Select **Reset** to set the counter back to zero and have the stopwatch begin counting again.
5. Press ◀◀ when finished.

Brick Attack™

1. Select **Menu** → **Tools** → **Brick Attack**.
2. To start the game, press OK to select **New**.
3. To pause the game, press ◀◀ , then press OK to **Resume**.

The goal of this game is to eliminate bricks arranged in levels. To do this, you send a moving ball upward using a paddle at the bottom of the screen. To move the paddle, press ◀▶ left or right. If an incoming call alert is received, the game is paused and exited. You can return to play once the incoming call alert is ended. The game cannot be paused while the phone is off.

Chapter 8

Web Browser

You can use your phone to browse the Internet if you have obtained phone Internet services from your service provider and if over-the-air Internet access is available in your area. Generally only those web sites which are provided by your wireless carrier can be accessed from your phone.

You may have access to personal information such as email, your calendar, or a personal address book. Your service provider determines which applications you can use and will notify you when new applications become available.

If your service provider activated Internet services on your phone and you are in an area that provides over-the-air Internet access, you may receive Net Alerts. These short messages allow you to quickly access information on the Internet. They may include stock quote alerts, traffic updates, or email. They are different from pages and text messages because the information in Net Alerts is stored on the Web, not on your phone. Accessing a Net Alert will launch the Internet browser on your phone and will cause you to incur airtime charges.

Note: You cannot receive incoming calls while you are in the Web Browser and a data call is in progress.

In this chapter

- Using the Web Browser page 78
- Other Web Services page 80

Using the Web Browser

The wireless Web Browser can be used in much the same way as standard PC-based browsers.

Note The appears in a secure Web Browser session.

To start the Web Browser

- Select **Menu** → **Web Browser**.

To navigate in the Web Browser

- If you have several URLs bookmarked, a list appears. Press up or down to scroll through the list. Press OK to select an URL and go to the site.
- An underline and an arrow indicate that there is more text. Press down to go to the next screen of text. Press up to move back one screen.

Web Browser options

The following options may appear on your screen:

- **Home**—Return to the main Web Browser window, or home screen.
- **Mark Site**—Save the current location as a bookmark for easy access.
- **Bookmarks**—Display a list of your saved Web sites.
- **Setup**
  - **Show URL**—Display the entire URL.
  - **About Openwave**—Displays information about your Web Browser version.
  - **Encryption**—Do not use this setting unless you are instructed to do so by your service provider.
  - **Set UP.Link**—Select a different browser server, if one is available. You can use this option if you have more than one Web Browser account, such as one for business use and one for personal use.
  - **Restart**—Restart the Web Browser.

To exit the Web Browser

- To exit the Web browser, do one of the following:
- Press ⏻
- Press ◀◀ from the Web Browser home screen.

Note

Usage charges may apply until you exit your Web Browser session by pressing ⏻ from any screen, or pressing ◀◀ from the Web Browser home screen. Check with your service provider.

Other Web Services

If your service provider activated Internet services on your phone and you are in an area that provides over-the-air Internet access, you may receive **Internet Alerts.** These short messages contain Web address information and are used in conjunction with the browser to alert you of content on a Web site.

Your service provider may also provide access to email, your calendar, or a personal address book via the Internet browser on your phone. Your service provider determines which applications you can use and will notify you when new applications become available.

Chapter 9

Frequently Asked Questions

In this chapter

- How do I select a menu item? page 82
- How do I power the phone on and off? page 82
- Is there a clear/backspace key? page 82
- How do I adjust my backlight setting? page 82
- Where are my call timers? page 82
- How many numbers are stored in the Recent Calls list? page 82
- How do I erase the phone numbers from my Recent Calls list? page 82
- How do I change my banner (the words on my phone screen)? page 83
- I forgot my mobile phone number. How do I display it on my phone? page 83
- How do I know that my phone is charging? page 83
- How do I know when my phone is fully charged? page 83
- How do I lock the keypad? page 83
- How many numbers can I store in the Contacts Directory (phone book)? page 83
- How do I change the faceplate on my phone? page 84

How do I select a menu item?

1. Press ⟨⟩ up, down, left or right to highlight menu items.
2. When an item is highlighted, press OK to select it.

How do I power the phone on and off?

- To power the phone on, press and hold ⏻ for approximately one second.
- To power the phone off, press and hold ⏻ for approximately 3 to 5 seconds until "Powering Off" appears on the screen.

Is there a clear/backspace key?

Yes. Press ⌫ to backspace and erase characters, whether you are dialing a number or entering text.

How do I adjust my backlight setting?

1. From the home screen, press OK to select **Menu.**
2. Use ⟨⟩ and OK to select **Settings** → **Display** → **Backlighting.**
   The Backlighting menu appears.
3. Use ⟨⟩ to scroll through the backlight options.
4. When the setting you want is highlighted, press OK to select it.

Where are my call timers?

1. From the home screen, press OK to select **Menu.**
2. Use ⟨⟩ and OK to Select **Settings** → **Call Information.**
   Here you will find the Recent Calls Timer, All Calls Timer, and Browser Timer.

How many numbers are stored in the Recent Calls list?

15 incoming and outgoing calls are stored.

How do I erase the phone numbers from my Recent Calls list?

1. From the home screen, press OK to select **Menu.**
2. Use ⟨⟩ and OK to select **Settings** → **Security.**
3. Enter your four-digit lock code.
4. Select **Erase Recent Calls,** then select **Yes** or **No.**

How do I change my banner (the words on my phone screen)?

1. From the home screen, press OK to select **Menu.**
2. Use ⊕ and OK to select **Display** → **My Banner** → **Edit.**

   To learn how to enter text, see See "Entering Text" on page 24.

I forgot my mobile phone number. How do I display it on my phone?

1. From the home screen, press OK to select **Menu.**
2. Use ⊕ and OK to select **Phone Info.**

How do I know that my phone is charging?

If the phone is on, you will see the phone battery icon in the upper-right corner of the screen. When the black bars in the icon are "moving," the phone is charging.

CAUTION: Be sure the phone charger is plugged into the charger jack at the **bottom** of the phone, and not the earpiece jack on the side of the phone.

How do I know when my phone is fully charged?

The phone battery icon in the upper-right corner of the screen is no longer "moving," and it is filled with black bars.

How do I lock the keypad?

- To turn on keyguard, press ⊕ to the left and hold it down until you see the message "Keypad guard is active. Press 123 to unlock."

  You can answer a call with Keyguard on, but you must turn it off before you can make a call.
- To turn off Keyguard, press 1 then 2abc then 3def.

How many numbers can I store in the Contacts Directory (phone book)?

You can store up to 200 phone numbers.

How do I change the faceplate on my phone?

1. Remove the battery door:
   a. Press ⏻ until "Powering off" appears on the screen.
   b. Hold the phone facing away from you.
   c. Using your thumb, slide the battery door down until it stops.

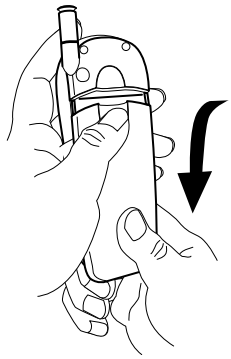

   d. Lift the battery door off the phone.

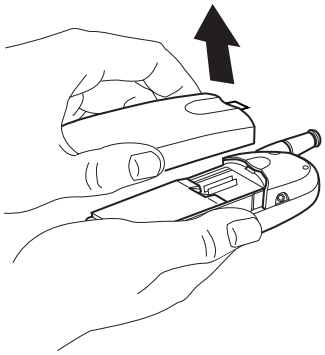

2. Remove the faceplate:
   a. Turn the phone over to face you with the antenna pointing down.
   b. Grip the back of the phone. With the other hand, grip the sides of the faceplate near the bottom of the phone.

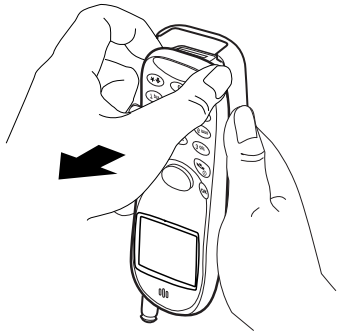

   c. Pull the faceplate out and down until it releases.
   d. Pull the keypad out of the faceplate.

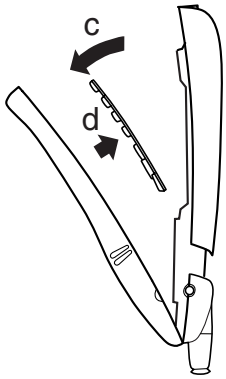

3. Put on a new faceplate:
   a. Push the keypad into the holes in the new faceplate.
   b. Align the top of the faceplate in the grooves in the top of the phone.
   c. Close the faceplate until it clicks into place.

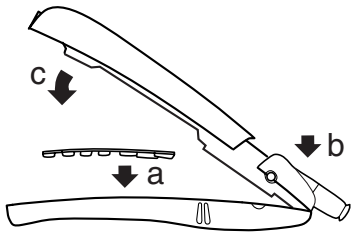

4. Replace the battery door:
   a. Hold the phone facing away from you.
   b. Align the battery door to the grooves on the sides of the phone.

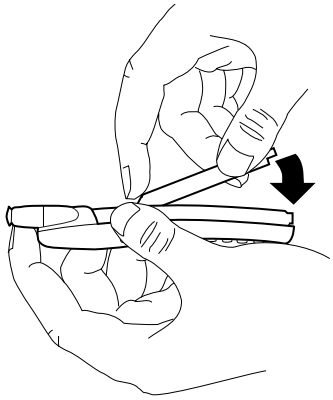

   c. Slide the battery door on until it clicks into place. Do not force.

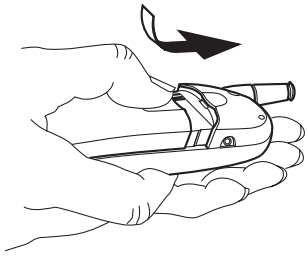

Glossary

AC adapter	A cable that connects the phone to a wall outlet and charges the phone battery.
analog mode	A state in which a phone communicates at 800 MHz and sends voices and key beeps as analog sounds.
Auto-Save	A feature which allows your phone to prompt you to save a phone number after you have dialed it three times.
bookmark	A Web file that lets you quickly connect to a site you have previously visited and marked (like a bookmark in a book).
CDMA	Code Division Multiple Access, a technology that digitally encodes the sound of voices and key beeps to ensure callers' privacy.
call forwarding	A programmable phone option that sends incoming calls to another phone number.
call waiting	A service-provider feature which causes your phone to beep if another call comes in while you are on the phone.
contacts directory	A feature of your phone that works like a set of phone index cards, allowing you to save phone numbers and other information.
data cable	An electrical wire capable of transmitting information between two or more devices.
digital mode	A state in which a phone communicates at 1900 MHz and sends voices and key beeps as digitally encoded signals instead of analog sounds. See "CDMA."
domain name	The address of a network connection, often in the format server.business.com
dual band	Able to operate in two frequency ranges, the 800 MHz band and the 1900 MHz band.
dual-mode	Able to operate in either CDMA digital service or analog cellular service at 800 MHz, and able to switch between digital mode and analog mode.
email	Electronic mail, a store-and-forward service for text and graphical messages from one computer to another.
enter	To save information in the phone's memory. Press keys to enter information.
Internet	The worldwide set of interconnected networks that share the same network address scheme and use the TCP/IP protocol.

hard pause	A delay which is programmed into a stored number. The phone does not continue dialing until you press a specific key.
home screen	The screen that appears when the phone is first turned on.
key beep volume	The level of noise that the phone makes when you press a key.
keyguard	A feature which can be turned on to protect the phone from accidental keypresses when a call is not in progress.
lock code	A four-digit sequence (usually 0000 or the last four digits of your phone number) that lets you restrict access to certain phone numbers or all phone numbers.
MO-SMS	Mobile Originated Short Messaging Service. Allows your phone to send short messages with other SMS-enabled handsets or e-mail addresses.
MT-SMS	Mobile Terminated Short Messaging Service. Allows your phone to receive short messages from other SMS-enabled handsets or e-mail addresses.
menu	A list of choices on the phone screen.
memory location	One of 99 reserved spaces for data. Each memory location can hold a phone number associated text, such as a name.
menu item	A choice within a menu on the phone screen.
power-save mode	A low energy consumption state indicated by the message “Power Save Mode.” Press any key to exit.
power off	When you turn off the phone, you cannot send or receive calls.
power on	When you turn on the phone, you can send and receive calls.
recent calls list	A list of phone numbers from recent incoming or outgoing calls, when the phone number is available.
roaming	R Using telephone services outside of the area covered by your home service provider. When you are roaming, the cost of phone calls and level of service may vary.
service area	An area in which a service provider’s terms of use apply uniformly.
service provider	A company which provides certain phone services, such as basic phone service, long distance, call waiting, and three-way calling. Phones may have the ability to perform these functions, but they cannot do so unless the service provider makes them available.
signal strength	The degree of radio frequency energy available to the phone. Both weather and distance affect signal strength. If signal strength is weak, call quality may decrease or the call may be disconnected.

SMS	Short Messaging Service. On networks equipped with Short Messaging Service (SMS) capabilities, your phone can communicate via short messages with other SMS-enabled handsets or e-mail addresses.
Silence All mode	A state in which all phone sounds are silenced, including the ringer and alerts. You can set the phone to vibrate or light up.
Smart Sound	A feature which allows the phone to automatically adjust the earpiece volume based on the amount of noise around you or the voice volume of the person to whom you are speaking.
standby time	The amount of time that the phone battery can maintain power when the phone is on.
talk time	The amount of time that you can talk on a wireless phone when the battery is fully charged.
three-way calling	A service-provider feature which allows phone calls between three people instead of two.
trimode	Able to operate in CDMA digital service at 800 and 1900 MHz, and analog cellular service at 800 MHz.
URL	Uniform Resource Locator, the address of an Internet location. A URL typically takes the form http://www.locationname.com
web browser	A tool which allows you to browse the Internet.

Index

Numerics
1-Touch Dialing, 20

A
Alarm Clock, 71
alerts, 68
  silencing, 8, 38
analog mode, 47
answering calls, 8

B
backlighting
  power, 52
battery
  care and safety, 17
  improving performance, 17
  performance, 17
Brick Attack game, 76

C
calculator, 73
callback number, adding to a message, 64
calls
  answering, 8
  call waiting, 22
  ending, 8
  muting, 9
  three-way calling, 22
  unmuting, 9
Clear key, 4
contact
  see also phone book
  adding information to, 29, 31, 32
  adding new, 30
  business, 30, 31, 33
  classifying, 30, 31, 33
  editing, 32
  erasing, 30, 31, 33, 34
  erasing information from, 34
  finding, 32, 35
  modifying, 32
  personal, 30, 31, 33
  saving, 29
  saving a phone number as, 29
  searching for, 32, 35
Contacts directory
  see also phone book
  calling from, 35
Countdown Timer, 74

D
data/fax setup, 48
dialing
  1-Touch, 20
  from Recent Calls list, 22
  speed, 19
digital mode, 47

E
End/Power key, 4
ending calls, 8

F
French characters, 28, 58

G
games
  Brick Attack, 76

H
hanging up, 8
hard pause, 20

I
icons, 5
InBox, Text, 58, 60, 65
Internet browser, 77

K
Keyguard, 39
keypad
  locking, 10, 39
  unlocking, 10, 39

L
language
  changing on your phone, 28, 58
languages, 28, 58
letters
  entering rapidly, 25, 55
  entering special characters, 28, 58
lock code, 87
locking
  keypad, 10, 39
  phone, 44
low memory warning, 69

M
making calls, 8

memory
how to free up, 69
low or full, 69
messages
adding a callback number to, 61, 64
erasing
automatically, 50, 65
individually, 65
filed, 63
receiving new, 59
retrieving, 59
saving, 61
sending, 61
later, 61
new, 61
preformatted, 62
saved, 63
scheduled, 64
urgent, 61
with a phone number, 64
with your phone number, 64
status of, 65
storing, 61
text
erasing, 60
replying to, 60
sending, 60
viewing, 60
viewing sender information, 60
mode
analog, 47
digital, 47
mute, 9

N

navigator key, 4
Net Alerts, 68, 80
numbers
entering, 27, 57

O

one-touch dialing, 20
OutBox, Text, 65

P

pause
hard, 20
timed, 20
pauses
hard, 50
timed, 50
phone
locking, 44
unlocking, 44
phone book
adding a number to, 29
adding information to entries, 29, 31, 32
adding new entry to, 30
calling from, 35
classifying entries in, 30, 31, 33
editing entry in, 32
erasing entry in, 30, 31, 33, 34
finding phone number in, 32, 35
modifying entry in, 32
saving a phone number to, 29
phone number
adding new, 30
finding your own, 8
saving, 30
preformatted messages, 62

R

Recent Calls list
description of, 21
dialing from, 22
viewing, 22
redial, last number called, 21
reminders, 68
resetting the phone, 5
ringer type, 40
ringer, silencing, 8, 38
ringers, changing, 40
roaming icon, 5

S

safety, 5
saving a phone number, 29
saving messages, 61
scheduled messages, 61
screen icons, 5
security
lock code, 87
Select key, 4
Shift key, 4
Short Messaging Service, 87, 88
silence
all sounds, 38
ringer, 8, 38
Silence All mode, 38
Smart Sound (see also volume, adjusting automatically), 9
SMS, 87, 88
sounds, 40
ringer type, 40
silencing, 38
Space key, 4
Spanish characters, 28, 58
speed dialing, 19
stopwatch, 75

symbols
    entering, 27, 57
symbols, entering, 27, 57

T

text
    entering rapidly, 25, 55
text entry
    normal mode, 25, 55
    rapid mode, 25, 55
Text InBox, 58, 60, 65
Text OutBox, 65
timed pause, 20
tools
    Alarm Clock, 71
    Brick Attack game, 76
    calculator, 73
    Countdown Timer, 74
    stopwatch, 75

U

unlocking
    keypad, 39
    phone, 44
unmute, 9

V

voicemail
    calling, 59
    changing assigned speed dialing number, 67
    changing number, 50
    checking, 59
volume
    adjusting automatically (see also Smart Sound), 9
    adjusting manually, 9

W

Web Browser, 77
    creating bookmarks, 78
    exiting, 79
    setting up, 78
    starting, 78